

Thermostat Instruction Sheet

TH-PSPLV Thermostat

Parts List

Single Stage Line Voltage Programmable Thermostat
(P/N: TH-PSPLV)

TH-PSPLV Specifications

Range: 45°-90°F
Differential: ±1°F Adjustable
Operation: Single stage; line voltage
Electrical Rating: 120-240 VAC; 16 Amp max; non-inductive
Contact Action: Opens on rise.
Dimensions: 4.7" x 2.7" x 2.4"
Additional Features: Separate 5-day (weekday) and 2-day (weekend) programming, program override with vacation hold, UL Listed.


Figure 1 • TH-PSPLV Thermostat



Installation Instructions

1. Remove cover of thermostat from base.
2. Disconnect the power source.
3. Locate in an area with good air circulation (no outside walls).
4. Install the thermostat approximately 5 feet above floor level.
5. Feed wires through the rectangle slot (Figure 2).
6. Connect wires to terminal screws (Figure 2).
7. Confirm that wiring does not interfere with thermostat operation.
8. Replace the cover.

Figure 2 • TH-PSPLV Typical Field Wiring

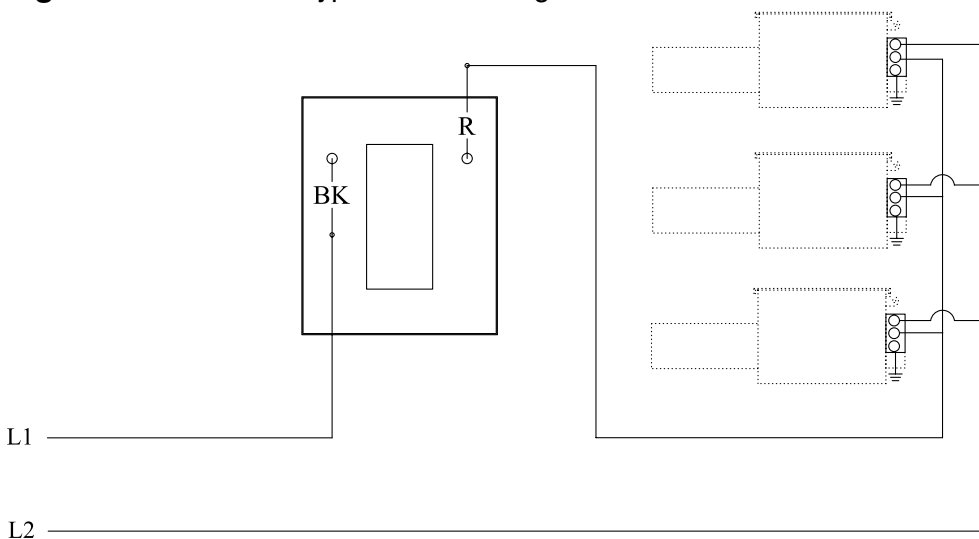

NOTE: Up to 3 line voltage tube heaters or multiple line voltage DR heaters can be wired to this thermostat.