


# Troubleshooting Guide AG2

**NOTICE** Bypassing any switch is intended for testing purposes only. Do not leave switch bypassed during normal operation or the heater's built-in safety mechanisms will be compromised.

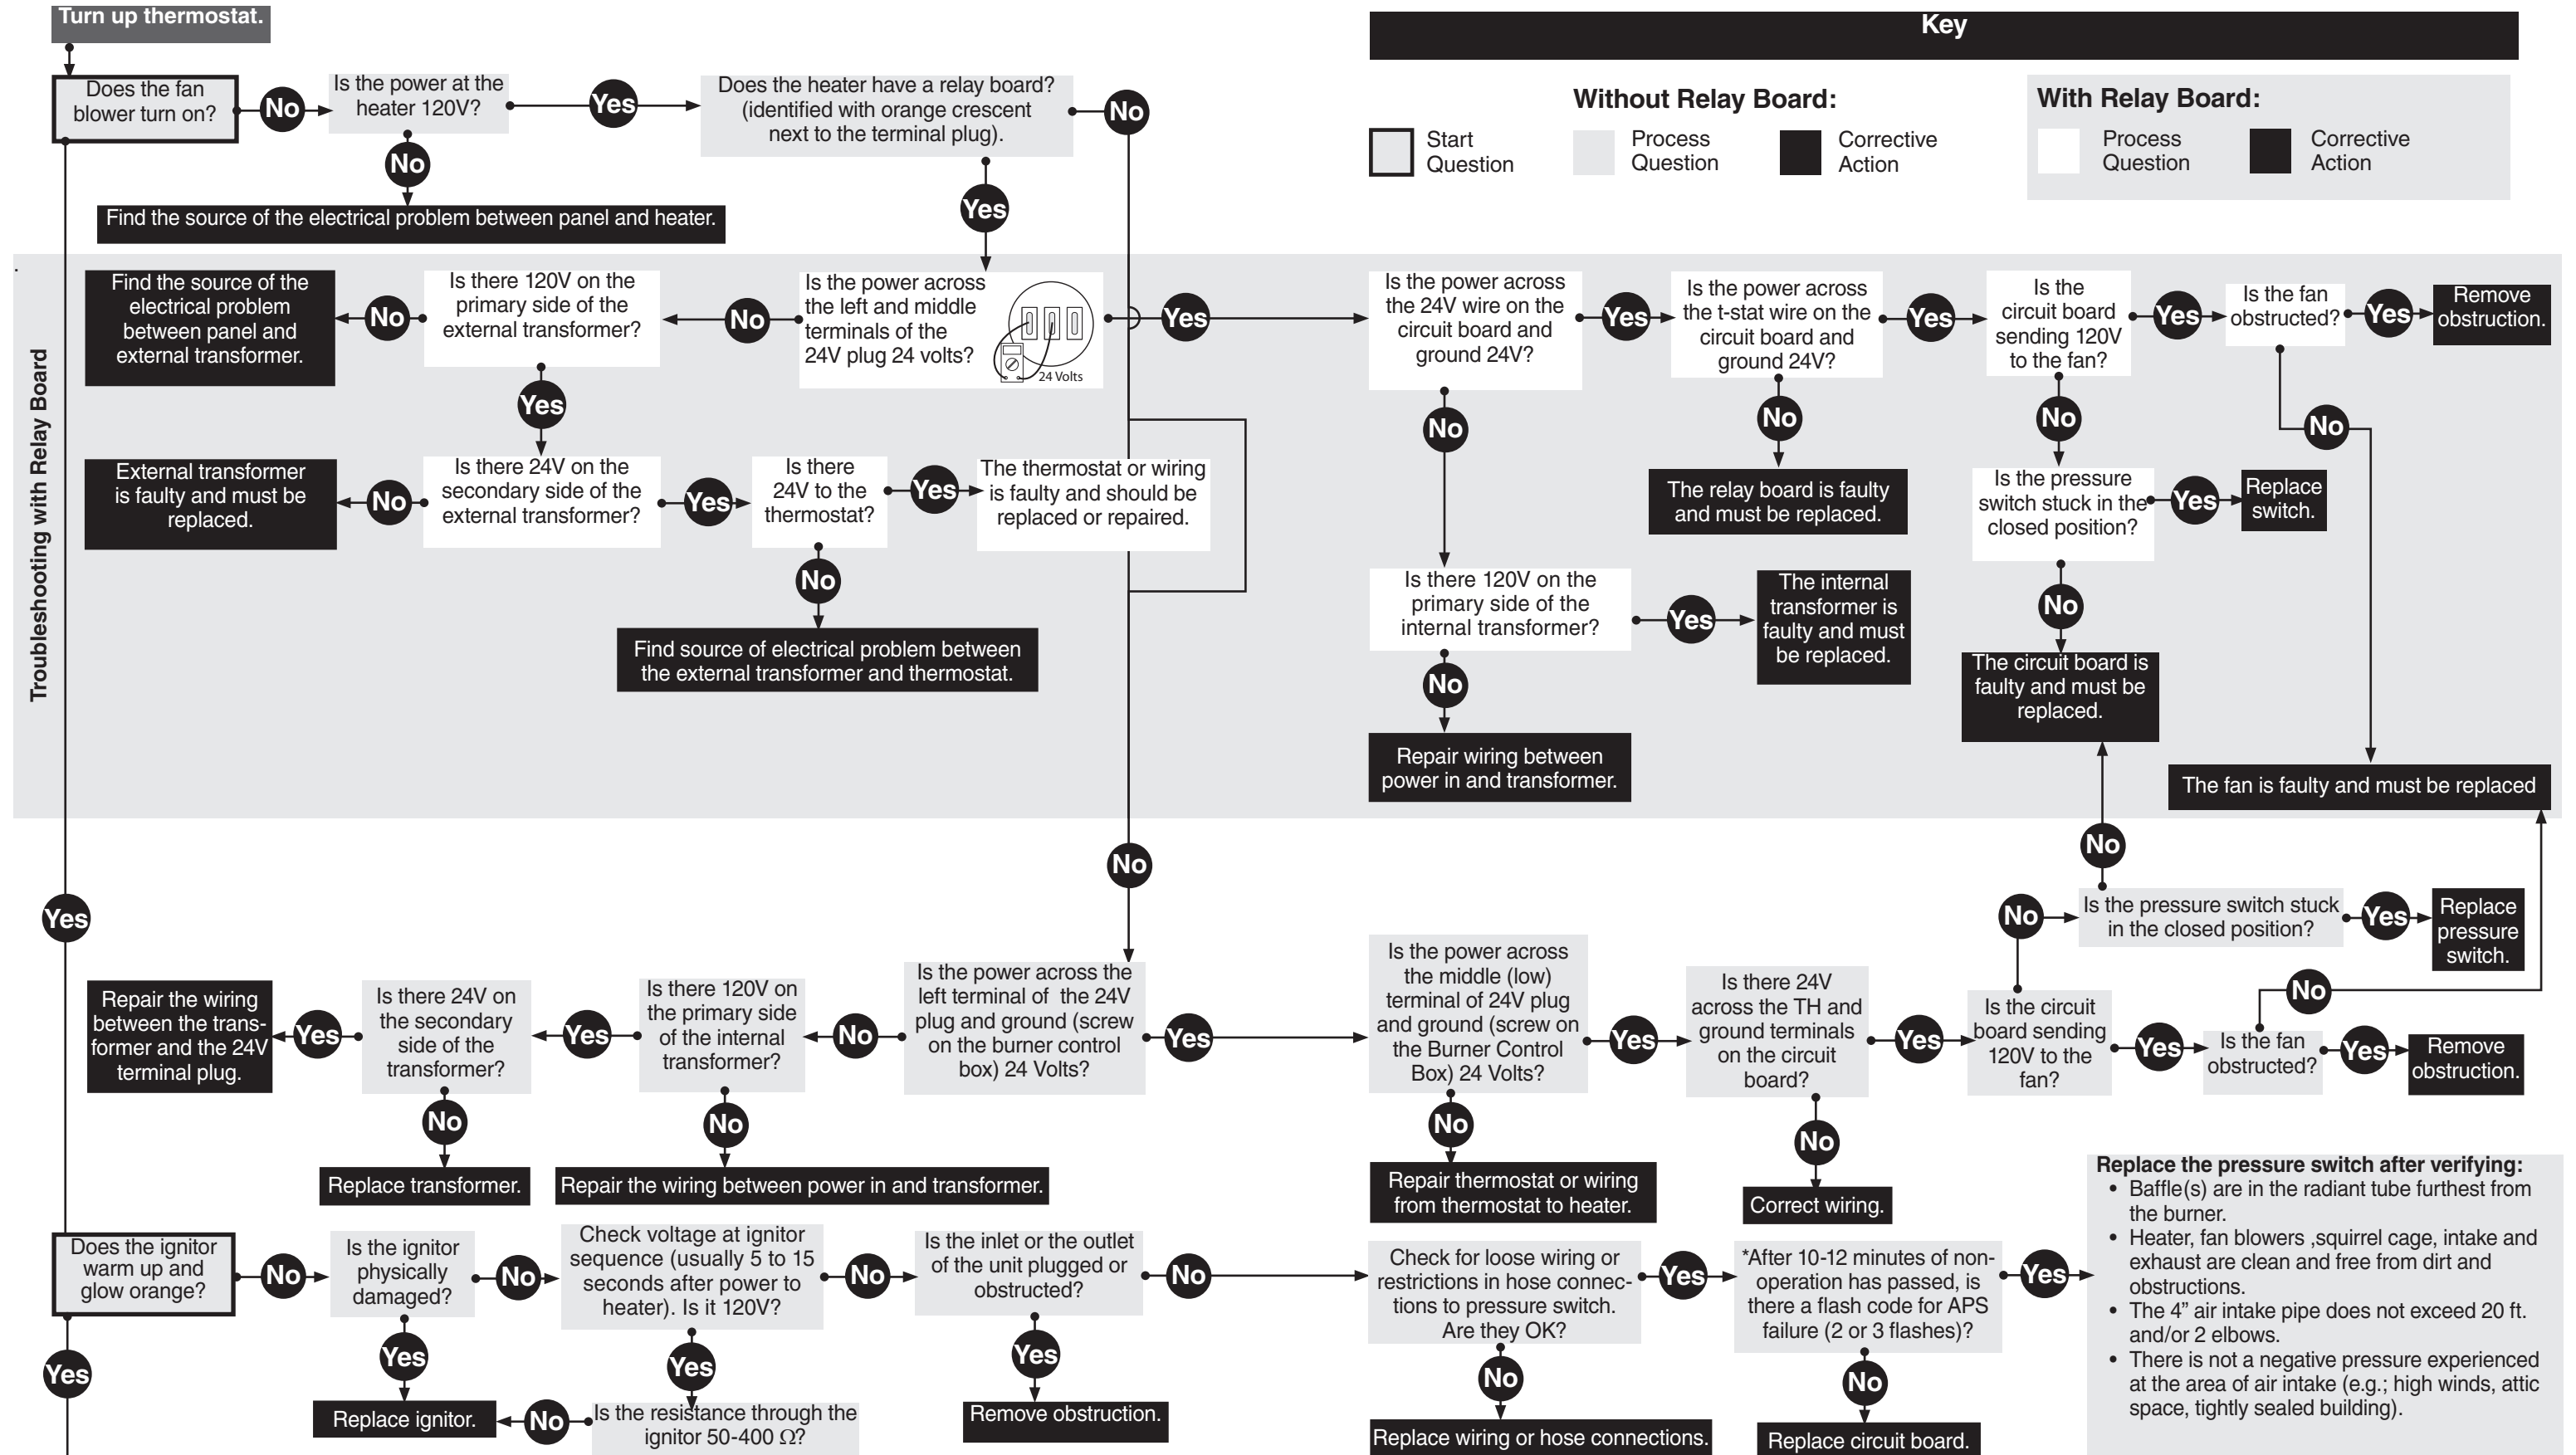

Continued on page below

\* Refer to LED diagnostic Fault Code Chart.

- Replace the pressure switch after verifying:**
- Baffle(s) are in the radiant tube furthest from the burner.
  - Heater, fan blowers, squirrel cage, intake and exhaust are clean and free from dirt and obstructions.
  - The 4" air intake pipe does not exceed 20 ft. and/or 2 elbows.
  - There is not a negative pressure experienced at the area of air intake (e.g.; high winds, attic space, tightly sealed building).

Continued from page above

