

## **Troubleshooting Guide HLV**

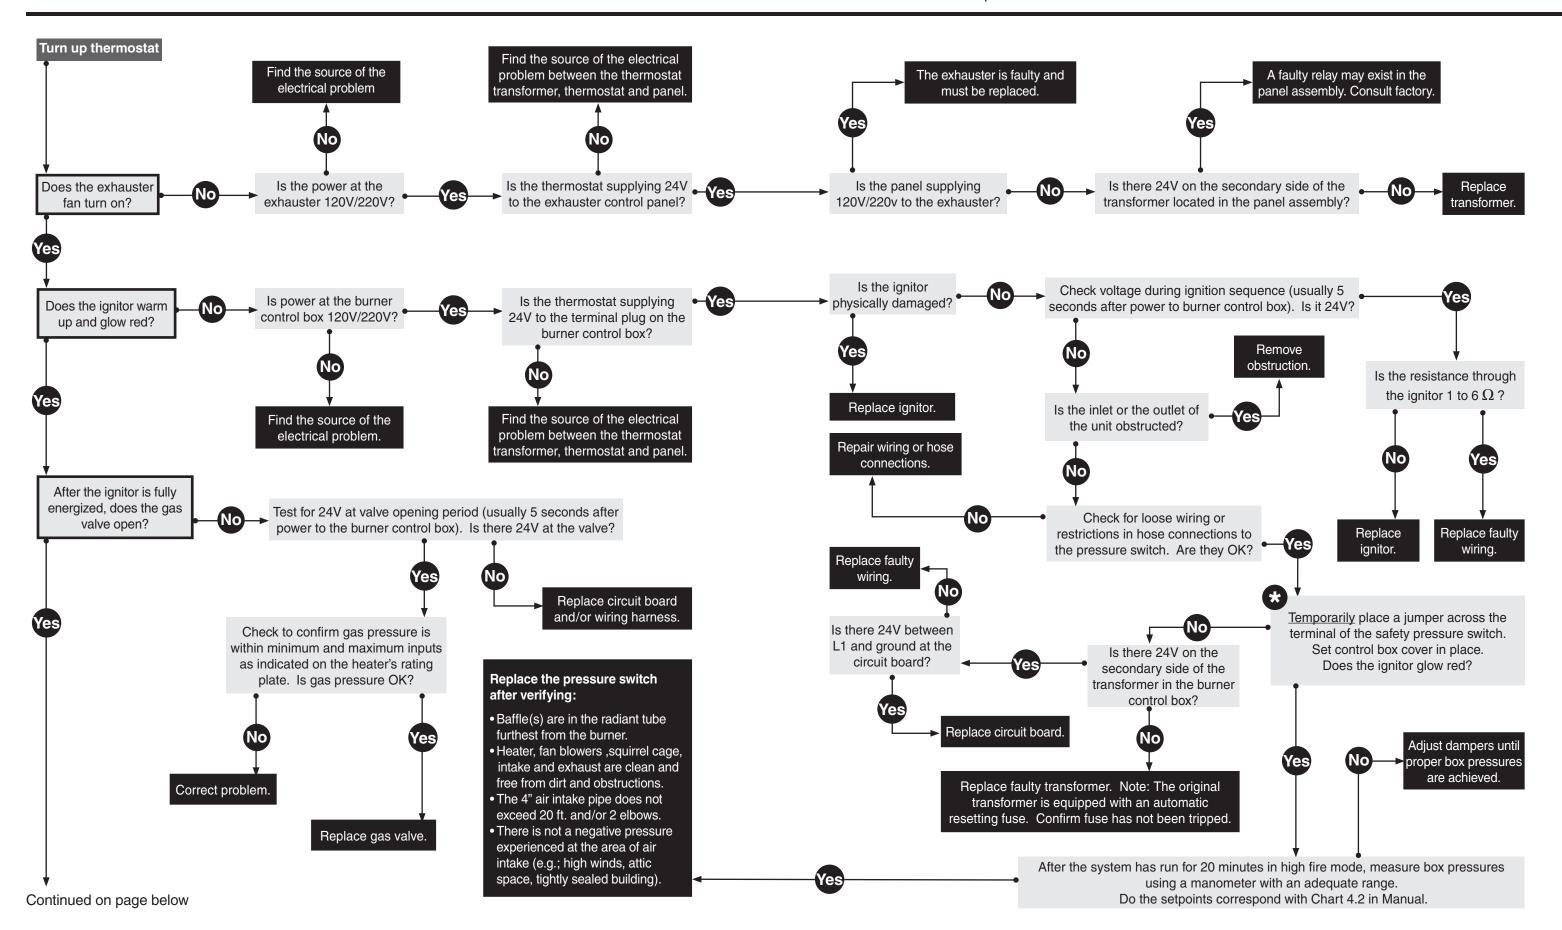

Bypassing any switch is intended for testing purposes only. Do not leave switch bypassed during normal operation or the heater's built-in safety mechanisms will be compromised.

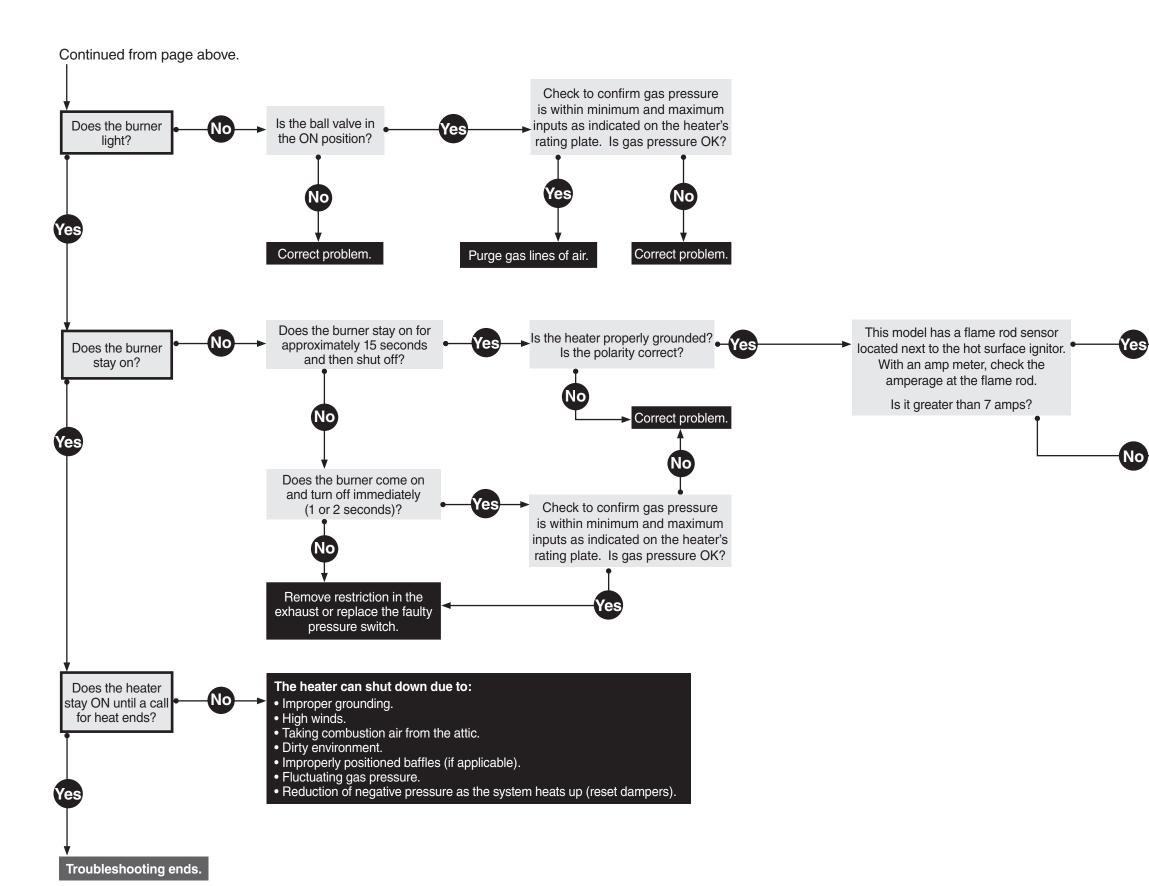



Confirm the flame sensor wire is

OK and then replace circuit board.

The sensing rod is faulty or the flame

is weak. Confirm that the heater is operating at proper gas pressures as

indicated on the heater's rating label.
Replace sensing rod if necessary.