

# Thermostat Instruction Sheet

## WR-S Single-Stage Thermostat

### ET5MS Specifications

**Range:** 40° to 80°F (4° to 26°C)

**Default Differential:** 2.0°F (1.0°C) Fixed

**Operation:** Single Stage, 24V and 120V

**Thermostatic Power:** 22 AMP at 24V to 277V

**Contact Action:** Opens on rise

**Dimensions:** 4.8125" X 3.3125" x 1.4375"

**Additional Features:** Snap action switch, double pole,  
CSA Certified.

Figure 1 • WR-S Thermostat



### Installation Instructions


1. Remove cover of thermostat from base.
2. Disconnect the power source.
3. Locate in an area with good air circulation (no outside walls).
4. Install the thermostat approximately 5 feet above floor level.
5. Replace the cover onto base.

#### WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 2 • WR-S Thermostat Wiring for Single Stage

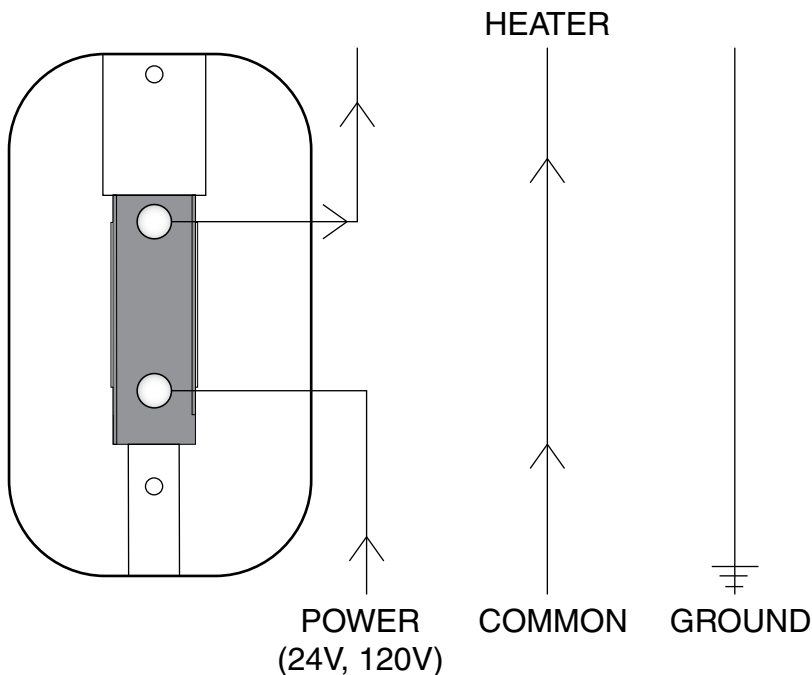

Reference the heater specific installation  
and operation manual for field wiring.