Thermostat Instruction Sheet

TH-BR52 Programmable Thermostat

See manufacturer's instructions for specific information or requirements.

TH-BR52 Specifications

Operation: Two-stage, single stage control.

Purpose: Flexible programming for residential and

commercial applications.

Programming: 7 Day, 5-2 Day or Non-Programmable.

Control Range: 45° to 90° F (7° to 32° C). Electrical Rating: 24 Volt AC (18-30 Volt AC).

1 amp maximum load per terminal.

5 amp total maximum load (all terminals).

Dimensions: 3.86" x 5.11" x 1.42".

Additional Features: Bright Blue Backlight, Meets

California Title 24 Guidelines, Multi-Level Keypad Lockout, Hardwire or Battery Powered, Indoor or Outdoor Remote

Sensing Capable.

Related Accessories: RS-BR53 Remote Indoor Sensor,


RS-BR54 Remote Outdoor Sensor

Installation Instructions

Must be mounted to an electrical junction box suitable for the application.

Figure 2 • TH-BR52 Thermostat Wiring

INSTALLER: Be sure to set the thermostat up for two-stage configuration.

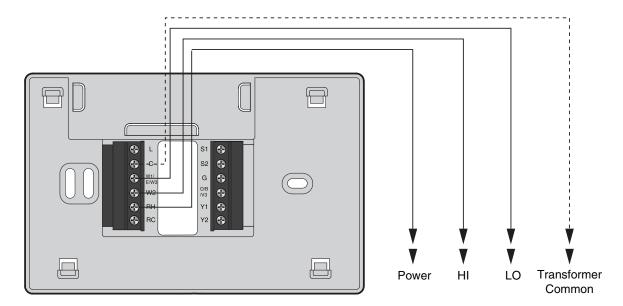

WARNING



To avoid electrical shock or damage to equipment, disconnect all power before installing or servicing.

Figure 1 • TH-BR52 Thermostat

