

TH-PC-M Controller

User Interface Guide

Modulating Controller for
Re-Verber-Ray® MP3 Series Heaters



⚠ WARNING



Failure to read and follow all instructions carefully before installing or operating this control could cause personal injury and/or property damage.



ELECTRICAL SHOCK HAZARD

To prevent electrical shock and/or equipment damage, disconnect electric power to the system at the main fuse or circuit breaker box until installation is complete.

INSTALLER: Present this manual to the end user.
Keep these instructions in a clean and dry place for future reference.

Model#: _____ Serial #: _____
(located on rating label)

LIOTHPCM-Rev. 03224
Print: XM-02/24(DRPC)

Table of Contents

1.0 Introduction	3
Safety Information	3
Before You Begin	4
User and Integrator Screens	5
2.0 Customized User HMI Display	9
Heating Only Configuration	13
3.0 Integrator Setup Screens	15
Network Screens	15
Zigbee Network	16
BACnet Network Settings	20
Modbus Network Settings	22
Wi-Fi Network Settings	23
Wi-Fi BACnet Network Settings	28
Configuration Screens	29
Setpoints Screens	41
Display Screens	43
Service View Screens	47
Test Outputs Screens	55
Language Selection Screens	57
Clock Schedule Screens	59
Occupancy Options	62
Automatic Demand Response (ADR) Screen	63
Ecosystem Settings	65
Temperature Alarms Configuration	68
Alarms	69
Lua Screens	70
4.0 Appendix	73
MP3 Series Field Wiring	73
Controlling Multiple Heaters with a Single Device	73

1.0 Introduction

Safety Information

Read these instructions carefully and inspect the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

Danger indicates a hazardous situation which, if not avoided, **will** result in death or serious injury.

WARNING

Warning indicates a potentially hazardous situation which, if not avoided, could result in death or injury.

CAUTION

Caution indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Notice is used to address practices not related to physical injury.

WARNING



Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by the equipment manufacturers for any consequences arising from the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Before You Begin

IMPORTANT! This controller has been loaded with a custom program specific to MP3 Series heaters. Certain default values will represent non-standard values.

LOSS OF CONTROL

The designer of any control scheme must consider the potential failure modes of control paths and, for certain critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop and over travel stop.

Separate or redundant control paths must be provided for critical control functions.

System control paths may include communication links. Consideration must be given to the implications of anticipated transmission delays or failures of the link.

Each implementation of equipment utilizing communication links must be individually and thoroughly tested for proper operation before being placed into service. **Failure to follow these instructions can result in equipment damage.**

ELECTROSTATIC DISCHARGE

STATIC SENSITIVE COMPONENTS. Circuit boards and option cards can be damaged by static electricity. Observe the electrostatic precautions below when handling controller circuit boards or testing components. **Failure to follow these instructions can result in equipment damage.**

Observe the following precautions for handling static-sensitive components:

- Keep static-producing material such as plastic, upholstery, and carpeting out of the immediate work area.
- Store static-sensitive components in protective packaging when they are not installed in the drive.
- When handling a static-sensitive component, wear a conductive wrist strap connected to the component or drive through a minimum of 1 megaohm resistance.
- Avoid touching exposed conductors and component leads with skin or clothing.

⚠ WARNING




Electrical Shock Hazard

Disconnect power at the main fuse or breaker prior to installing this unit.

User and Integrator Screens

This guide shows the user interface instructions for the TH-PC-M Series Controller firmware revision 2.6 for users and integrators.

The TH-PC-M has dynamic screens that show adjustable parameters and read-only status information. Some screens and parameters show only when a corresponding parameter is selected. Some screens show only on models with onboard Zigbee, optional Zigbee add-on module, optional Zigbee Wi-Fi module, or paired Zigbee wireless sensor end devices (SED). The Lua selection on the Setup screen shows only if a Lua script is uploaded to the TH-PC-M controller.

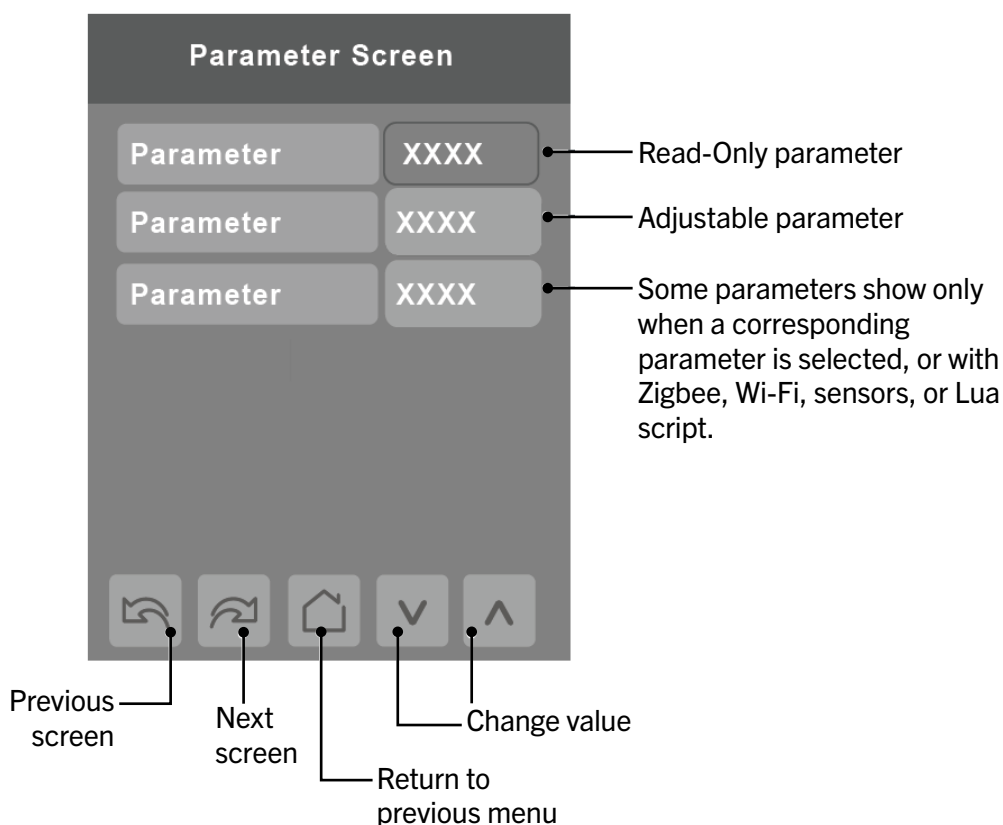

NOTE: When any change is made to a parameter, the value is automatically saved in memory when the next parameter is selected or another screen is opened. This event is true only if a parameter was changed locally on the RC. Making changes through BACnet will not have the same outcome. If changes need to be done remotely through BACnet, use priority 1, 2, or 3, or write to relinquish default (priority 17).

Disclaimer

Standby screen: The controller incorporates TFT-type LCD technology, and therefore, necessary precautions are required to prevent the phenomenon of image retention (residual image) from occurring.

Image retention may occur when a static image is displayed on the screen for a prolonged period of time. This can cause a faint outline of the image to remain visible on the screen when the screen is changed via the user menu, or a different image is uploaded and selected to be displayed. To minimize and prevent image retention, it is recommended to select the **Screen save** setting on the **Standby screen** selection from the setup menu “**Display 1/3**” on page 43. This setting switches the display during periods of inactivity from the Home Screen.

It is recommended to use a black or medium gray image, or one with light color contrasts as the screen saver to prevent this phenomenon from occurring. If the display still exhibits this phenomenon, loading an all-black or all-medium gray image as the screen saver and displaying it for upwards of 5 hours continuously minimizes this effect.

NOTE: Avoid placing the Controller in poorly ventilated areas, or in areas that may create excess heat around the display.

BACnet Integration Guide References

To simplify cross-referencing between the User Interface Guide and the [BACnet Integration Guide](#), BACnet object properties are included in the Parameter Details tables as follows:


- **Object name.**
- **Instance number** and **object type prefix.** Object type prefixes are described as follows:
 - AI - Analog Input
 - AO - Analog Output
 - AV - Analog Value
 - BI - Binary Input
 - BO - Binary Output
 - BV - Binary Value
 - CSV - Comma-Separated Value
 - MSI - Multi-State Input
 - MV - Multi-State Value
- **Binary range values** (for BI, BO, BV, MSI and MV instance numbers) and **status enumeration** descriptions.

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Fan status Default value: Off MSI326 — Instance number	Fan Speed Status — Object name Status value: 1=Off, 2=Low, 3=Med, 4=High — Range values and enumeration

HMI Display

The User Human Machine Interface (HMI) is configurable and allows display functions such as Date, Time, Humidity, CO₂ levels, Outdoor Temperature, and Setpoint to be enabled or disabled by setting various parameters.

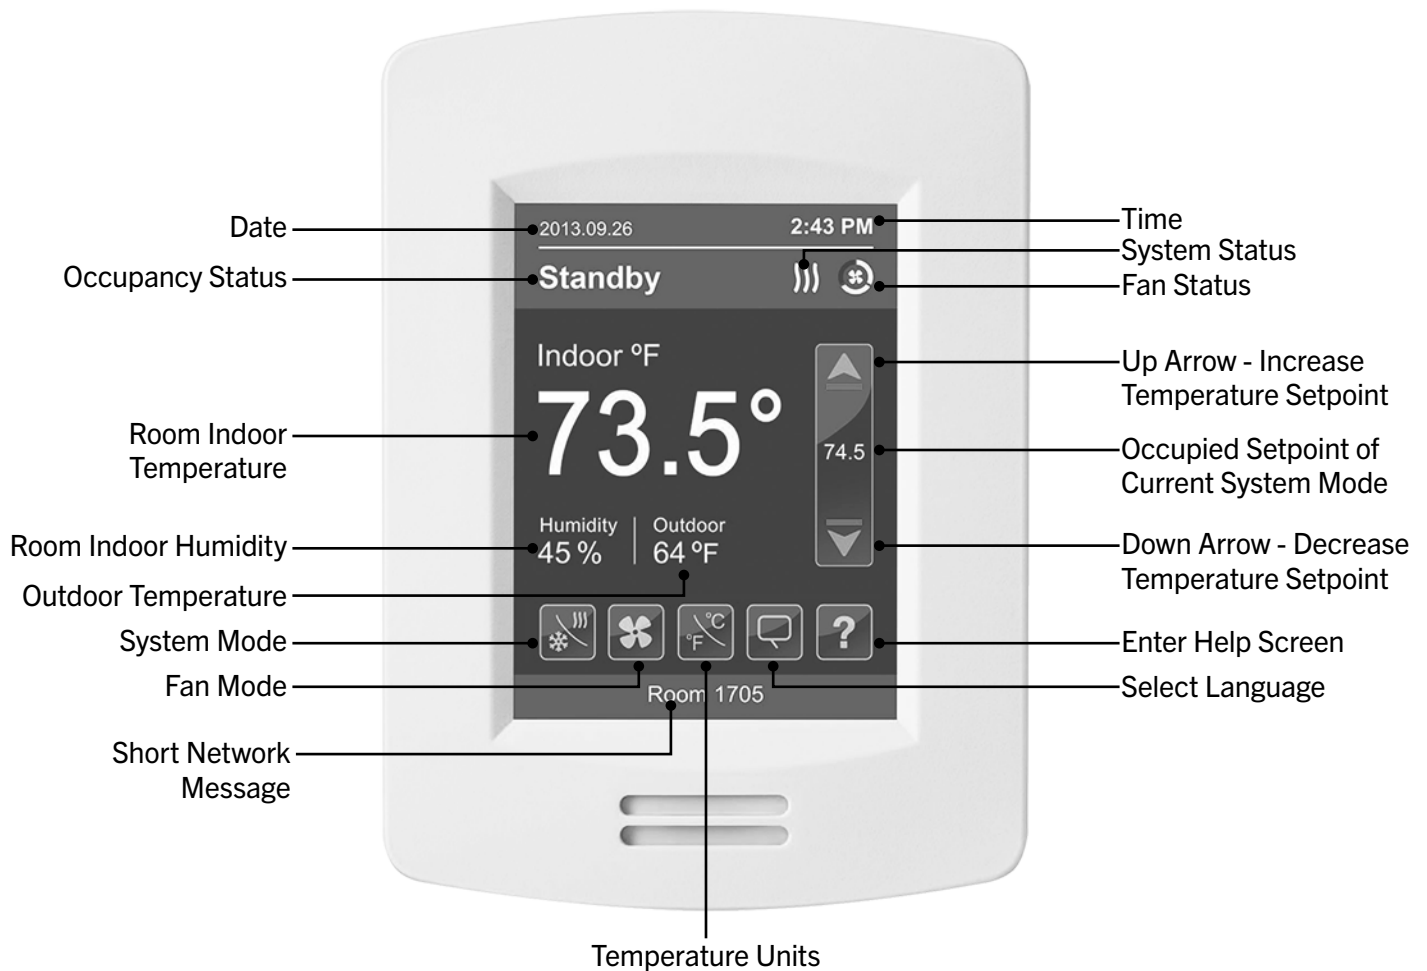


Enter Setup Screen



Touch and hold this point for 3 seconds to enter setup mode

Note: If a configuration/installer password is activated to prevent unauthorized access to the configuration menu parameters, a password entry prompt shows to prevent access to device configuration components.

Setup 1/2

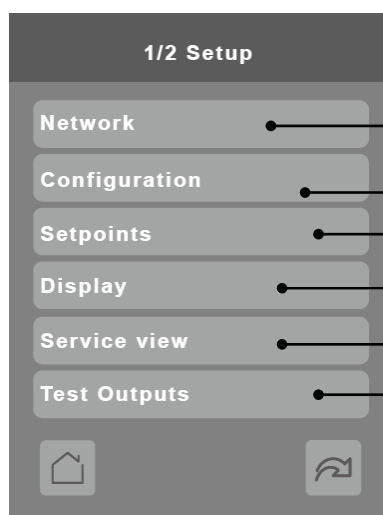

BACnet MS/TP, Modbus, Zigbee, and Wi-Fi network settings (Zigbee network settings appear only if Zigbee feature is available)

Parameter Configuration Menu


Setpoint Settings

Display Settings

Status Display (Read Only)

Test Outputs Settings

Setup 2/2

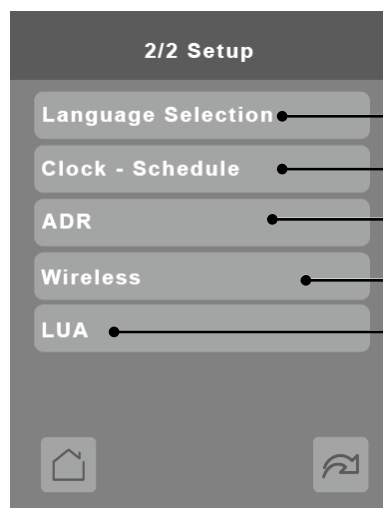

Select Language

Set Clock, Schedule, and Occupancy

Automatic Demand Response

Wireless Ecosystem Settings (shows only if Zigbee feature is available)

Lua Scripting (shows only if Lua script is uploaded)

2.0 Customized User HMI Display

User HMI for Hospitality

To select the User HMI configuration, refer to “Display 1/3” on page 43.

Hospitality 0



- Setpoint adjustment
- System mode setting
- Fan mode setting
- Local unit scale adjustment
- Local user language
- User help menu

Hospitality 1



- Setpoint adjustment
- System mode setting
- Fan mode setting
- User help menu

Hospitality 2



- Setpoint adjustment
- Local unit scale adjustment
- Local user language
- User help menu

Hospitality 3



- Setpoint adjustment
- User help menu


Note: Parameters are model dependent and may not appear on certain models.

Hospitality 4



- Fully locked interface with no user settings

Hospitality 5

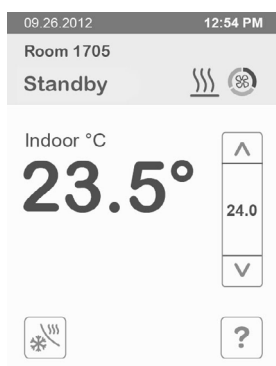

- Setpoint adjustment
- System mode setting
- User help menu

Hospitality 6



- Setpoint adjustment
- System mode setting
- Fan mode setting
- Local unit scale adjustment
- User help menu

User HMI for Commercial

To select the User HMI configuration, refer to “Display 1/3” on page 43.

Commercial 7




- Setpoint adjustment
- System mode setting
- Fan mode setting
- Unoccupied mode override
- User help menu

Commercial 8



- Setpoint adjustment
- Unoccupied mode override
- Local user language
- User help menu

Commercial 9

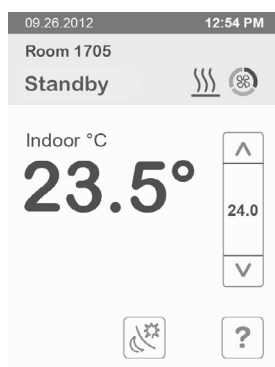


- Setpoint adjustment
- Unoccupied mode override
- User help menu

Commercial 10




- Unoccupied mode override

Commercial 11

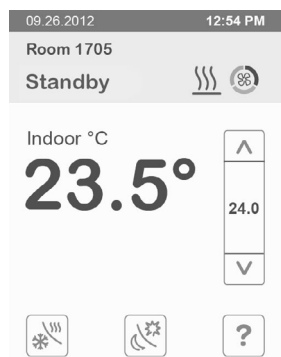

- Setpoint adjustment
- System mode setting
- Unoccupied mode override
- User help menu

Commercial 12

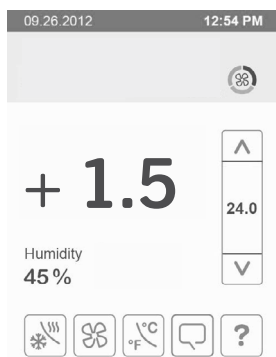


- Offset setpoints adjustment
- System mode setting
- Local user language
- Fan mode setting
- User help menu

Note: The day/night setback button appears only in unoccupied mode in the Commercial HMIs 7 to 11. If UI17 input is configured as “override,” the day/night setback button does not show.

Note: Parameters are model dependent and may not appear on certain models.

User HMI Show/Hide Options


User HMI displays can be customized further by hiding the system status, fan status or help button. Each show/hide option is applicable to all User HMI configurations where the option is shown. To hide the option, select disabled for each display setup screen parameter. Refer to "Display 3/3" on page 46.

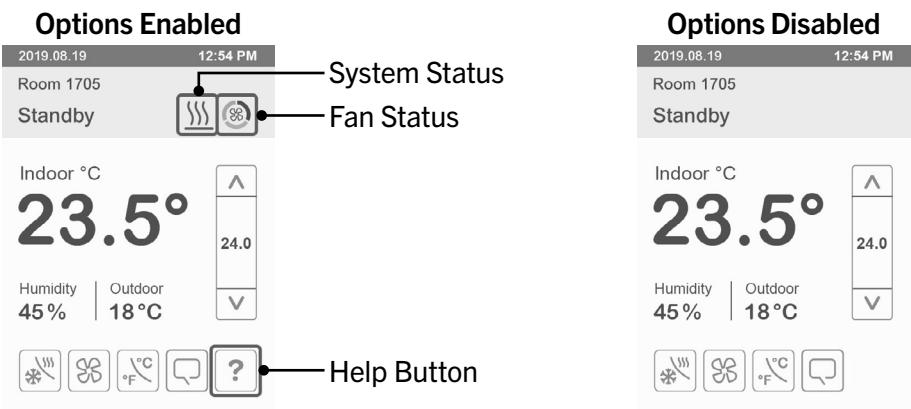

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Control Status Default value: Off MV112	System Status (BACnet object name: Control Status) Status value: 1=Off, 2=Cool, 3=Heat
Fan Status Default value: Off MSI326	Fan Speed Status Status value: 1=Off, 2=Low, 3=Med, 4=High

System Mode

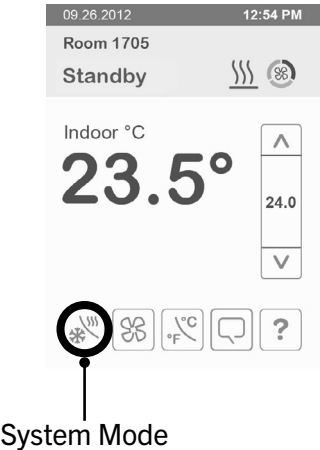


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
System Mode Default value: Heat MV16	System Mode Off: Heating, Cooling, and Dehumidification demands are ignored. Auto: Controller automatically toggles between Heating and Cooling modes to satisfy both Heating and Cooling demands. Dehumidification is allowed. Cool: Controller only satisfies Cooling demands. Heating demands are ignored. Dehumidification is ignored. Heat: Controller only satisfies Heating demands. Cooling demands are ignored. Dehumidification is allowed. Choices: 1=Off, 2=Auto, 3=Cool, 4=Heat

Fan Mode Settings


The Fan Mode settings displayed on the home screen must be configured in the Fan menu tab of the Configuration menu.

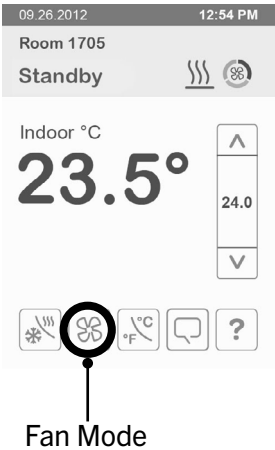

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Fan Mode Default value: Auto MV17	Fan Mode Choices: 1=On, 2=Auto , 3=Smart

Heating Only Configuration

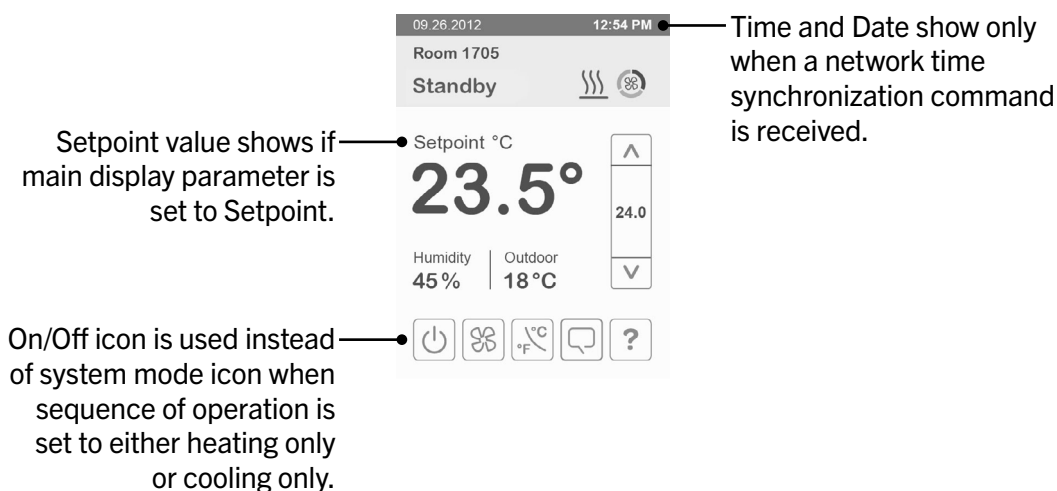


Setpoint Adjustment for Automatic Mode

In automatic mode, setpoint showing at the top of the set point bar located directly under the red line represents the actual occupied cooling setpoint.

During occupied setpoints adjustment, large digits are temporarily used to display the occupied Cooling Setpoint or occupied Heating Setpoint. The actual setpoint is dependent on the last effective demand (heating or cooling). The setpoint on top of the blue line represents the actual occupied heating setpoint. The differential between the occupied heating and cooling setpoint is defined by the minimum deadband configuration parameter.

Normal temperature display resumes after setpoints are adjusted and the actual occupied heating and cooling setpoints show in the setpoint bar.

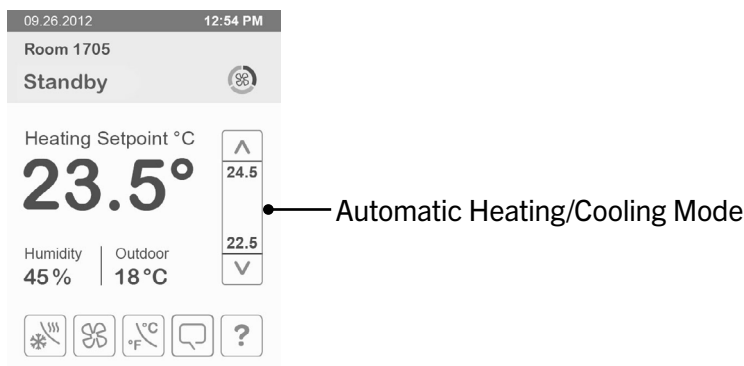

Other Functions

Local humidity shows when RH display is enabled on the setup display screen, from either the internal onboard sensor or a wireless sensor end device selected by the RH sensor parameter on the setup configuration screen.

CO₂ shows when CO₂ display is enabled on the setup display screen, from either the optional CO₂ detection sensor module or a wireless sensor end device selected by the CO₂ source parameter on the setup configuration screen.

Outdoor temperature shows when receiving a valid networked outdoor temperature value or a temperature sensor connected to UI23.



Customizable Color Options

To select the color option, refer to “Display 1/3” on page 43.

Color options include:

- White
- Green
- Blue
- Grey
- Dark Grey
- Pink
- Purple
- Red
- Orange
- Black

3.0 Integrator Setup Screens

Network Screens

User can select wired BACnet/Modbus/Zigbee wireless protocol (when Zigbee feature is available).

NOTICE


UPGRADE OF ZIGBEE FIRMWARE REVISION 24 TO 30

The upgrade from Zigbee firmware revision 24 to 30 will **not** support the Green Power Sensor (SED-CO2-G-5045 or SEDTRH-G-5045). It will therefore need to be recommissioned.

There is also a new “Security Levels” parameter for the Zigbee network (see page 16):

- **Low** (default value) is fully backwards compatible with Zigbee Home Automation 1.2 devices, and therefore compatible with all of our sensors.
- **Normal** or **High** (needs to be selected by user) is only compatible with Green Power and Zigbee 3.0 network standard (Leedarson sensors). If the Normal or High Security Level is selected with old NYCE or Centralite sensors, they will be removed from the network.

Failure to follow these instructions can result in equipment being disconnected from the network.

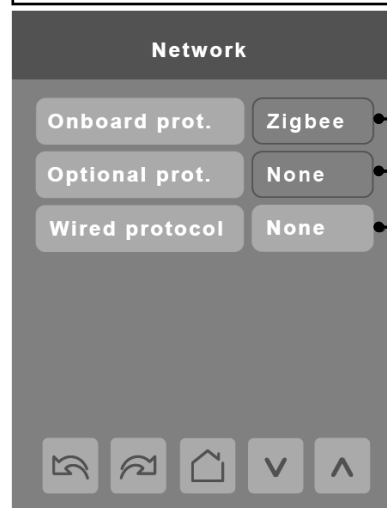

Onboard Zigbee Detection (Read Only)

Type of Expansion Module: Zigbee, IP, or BAC. IP (Read Only)

Wired Protocol (BACnet MS/TP or Modbus)

NOTICE

DISABLED WIRED NETWORK PROTOCOL

The RS-485 transceiver connected to pins 13 and 14 is not installed on Controllers with part numbers VT8650U5000N and VT8650U5500NP, thus disabling the wired network protocol (BACnet MS/TP or Modbus). The network screens and the optional Wi-Fi protocol BACnet/IP will still operate normally.

When ordering, make sure the Controller specifications comply with your system design.

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Onboard Prot. Read Only		Onboard Protocol Onboard Zigbee detection Display Readings: None, Zigbee
Optional Prot. Read Only		Optional Protocol Requires Zigbee add-on module (VCM8000) or Wi-Fi module (VCM8002). BACnet/IP is enabled from the Configuration Web Page or Uploader Tool. None: No module detected Zigbee: Zigbee module detected IP: Wi-Fi module detected BAC. IP: Wi-Fi module detected and BACnet/IP enabled Display Readings: None, Zigbee, IP, or BAC. IP
Wired Protocol Default value: BAC MSTP		Wired Protocol None: No wired protocol configured BAC MSTP: BACnet MS/TP network protocol Modbus: Modbus network protocol Choices: None, BAC MSTP, or Modbus

Zigbee Network 1/3

The Zigbee Network screen shows only in models with onboard Zigbee or optional Zigbee add-on module.

When creating a Zigbee network, there must be one and only one device with its Node Type set to Coordinator.

For a Zigbee network with a single Controller (RC), the RC is set as Coordinator to pair with the Sensor End Devices (SED). Setting the RC back to Router will remove the paired SEDs.

For a Zigbee network with a Building Management System (BMS) server or controller paired to multiple RCs, the BMS is set as Coordinator and the RCs are set as Router. The Coordinator BMS controls the pairing of the Router RCs to the SEDs

Note: Before pairing any Zigbee devices, the network must first be created by the Coordinator.

1/3 ZigBee Network

Node type

Router

PAN ID

0

Channel

10

Security

Low

Network Status

No NWK

Permit join

Off

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Node type	Default: Router	Node Type Sets device to act as Router or Coordinator in a network. Coord.: Creates the network and manages the binding of wireless devices. Router: Joins a network created by a coordinator (Coordinator permit join must be set to 'ON'). Choices: Coord. or Router
PAN ID	Default value: 0	Zigbee Pan ID Personal Area Network Identification that links specific Controllers to specific Zigbee coordinators. For every Controller reporting to a coordinator, set the SAME PAN ID value both on the coordinator and the Controller. Note: The default value of 0 is NOT a valid PAN ID and causes Zigbee to be disabled. Range: 1 to 65535

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Channel Default value: 10	Zigbee Channel <p>The channel (wireless frequency) on which the Zigbee network transmits and receives data. The channel of the Coordinator must match that of the routers to exchange data.</p> <p>The default value of 10 is NOT a valid channel and causes Zigbee to be disabled. The valid range of available channels is from 11 to 25.</p> <p>Using channels 15, 20, and 25 is recommended. Channel 25 is considered as being the best one because it is furthest from the Wi-Fi channels.</p> <p>Range: 10 to 25</p>
Security Default value: Low	Security Levels <p>Note: Changing between Zigbee Security levels does not require re-creating the Zigbee network, or re-commissioning sensors.</p> <p>Low: Disables new security features in Zigbee 3.0 to be fully backwards compatible with Zigbee Home Automation 1.2 devices, and therefore compatible with all of our sensors.</p> <p>Normal: Enables the typical new features of Zigbee 3.0. This means that legacy Zigbee Home Automation 1.x devices cannot join a Normal security network. Compatible with the following sensors:</p> <ul style="list-style-type: none"> • SED-WDS-P-5045 • SED-WDC-G-5045 • SED-CMS-P-5045 • SED-WMS-P-5045 • SED-MTH-G-5045 • SED-TRH-G-5045 • SED-C02-G-5045 <p>High: Enables the Zigbee 3.0 high security network joining. The high security level will encrypt the initial network key transport from the network coordinator to the joining Controller. This will protect the joining process from eavesdropping attacks (also known as sniffing or snooping attacks). Your network coordinator, such as a BMS server or controller, must be compatible with the Zigbee 3.0 standard. To start the network join, the Controller's IEEE address and install code must be transferred to the network coordinator (refer to "ZigBee Network 3/3" on page 19).</p> <p>Note: Before starting the network join, make sure to set the PAN ID and set the Node type to Router. High security is supported only when the Node Type is set to Router, it is disabled when the Node type is set to Coordinator.</p> <p>Important! Selecting the Normal Security option will result in the removal of legacy sensors from the network.</p> <p>Choices: Low, Normal or High</p>
Network Status Read Only MSI2	Zigbee Network Status <p>Shows the current status of the Zigbee network.</p> <p>Not det.: Zigbee module not detected Pwr on: Zigbee module detected but not configured No NWK: Zigbee configured but no network joined Joined: Zigbee network joined Online: Communicating (Exchanging data)</p> <p>Display Readings: 1=Not det., 2=Pwr on, 3=No NWK, 4=Joined, 5=Online</p>
Permit join Default value: Off	Permit Join <p>Changing this value to "Off" on the Coordinator prevents any new Zigbee devices from joining the network.</p> <p>Permit join can be On/Off when the Controller is a Coordinator, however the parameter is read only when the Controller is a router. If not set to off manually the Permit join will stay On for 3 hours.</p> <p>Choices: On or Off</p>

Zigbee Network 2/3

2/3 ZigBee Network

COM address

254

Short address

0x0000

IEEE address:
00124B0018E25296

ZigBee revision:
30.0.0-13-8c3477d

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
COM address Default value: 254 AV10	COM Address	Controller networking address. For wireless models, the use of the COM address is not mandatory. The COM address is an optional way to identify a device on the network and is recommended if used with a BMS. It is Mandatory for BACnet. Range: 0 to 254
Short address Default value: 0 Read Only	Zigbee Short Address	The unique Zigbee short address is generated once a wireless device joins a Zigbee network.
IEEE address Read Only CSV10	Zigbee IEEE Address	The extended IEEE address (MAC address) is a unique worldwide identifier of the onboard Zigbee or optional Zigbee add-on module.
Zigbee revision Read Only CSV9	Zigbee Firmware Revision	Shows the Zigbee firmware revision number.

Zigbee Network 3/3



Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
IEEE address Read Only CSV10		Zigbee IEEE Address The extended IEEE address (MAC address) is a unique worldwide identifier of the onboard Zigbee or optional Zigbee add-on module.
Install code Read Only		Install Code The install code is used as a shared key to make an initial secure connection between the network coordinator and the Controller when joining the Zigbee 3.0 high security network (refer to “Security Levels” on page 21). Once the Controller has successfully joined the network, a new key is created for future secure connections. The install code contains a key of 16-byte hexadecimal numbers plus a 2-byte cyclic redundancy check (CRC) code at the end. Warning: To maximize security, a new random install code is generated each time the Controller is power cycled, or its Zigbee settings are changed. Make sure to set the Zigbee PAN ID and set the Security Level to High before transferring the Install Code.
QR code Read Only		QR Code The QR code provides an easy way to transfer the Controller’s IEEE address and install code to the network coordinator. The QR code format is defined by the Zigbee 3.0 standard. The QR code is scanned with the mobile app for your gateway commissioning software. If your software does not support QR code data transfer, you can read the IEEE address and install code and enter them into a web page or provide them over the phone to the system administrator. Format: Z\$A:{IEEE address}\$! :A{Install code}

BACnet Network Settings

BACnet network screen shows when BACnet MS/TP is selected in wired protocol parameter.

1/2 BACnet Network	
COM address	254
Network units	SI
Network lang.	English
Baud rate	Auto
BACnet status	Offline
BACnet PRate	4

Parameter Details


Configuration Parameters Default Value	Significance and Adjustments
COM address Default value: 254 AV10	COM Address Controller networking address. Default value of 254 disables BACnet communication for the Controller. Range: 0 to 254
Network units Default value: SI MV6	Network Units Network units transmitted over the BACnet network. NOTE: Use the Temperature scale parameter to change the display units locally on the Controller. SI: Network units shown as International Metric units. Imperial: Network units shown as Imperial units. Choices: 1=SI, 2=Imperial
Network lang. Default value: English MV7	Network Language Network language/object names transmitted over network. Choices: 1=English, 2=French, 3=Spanish
Baud rate Default value: Auto MV8	BACnet Baud Rate Leave the value at Auto unless instructed otherwise as this automatically detects BACnet baud rate. Choices: 1=9600, 2=19200, 3=38400, 4=57600, 5=76800, 6=115200, 7=Auto
BACnet status Read Only	BACnet Status Read Only value shows if a BACnet Network is detected or not. Display Readings: Online or Offline
BACnet PRate Default value: 4 AV16	BACnet Stack Poll Rate Rate at which a BACnet stack is processed, in milliseconds. Range: 1 to 5.

BACnet Instance Number

The default BACnet instance number is generated by the model number and COM address of the Controller. For example, the instance number of a VT8650U5500BP with a COM address of 57 is generated as “86057.”

The default instance number appears first. To change the instance number, use number pad, and press **Accept and save**.

Tap “R” icon to reset to automatic instance addressing.

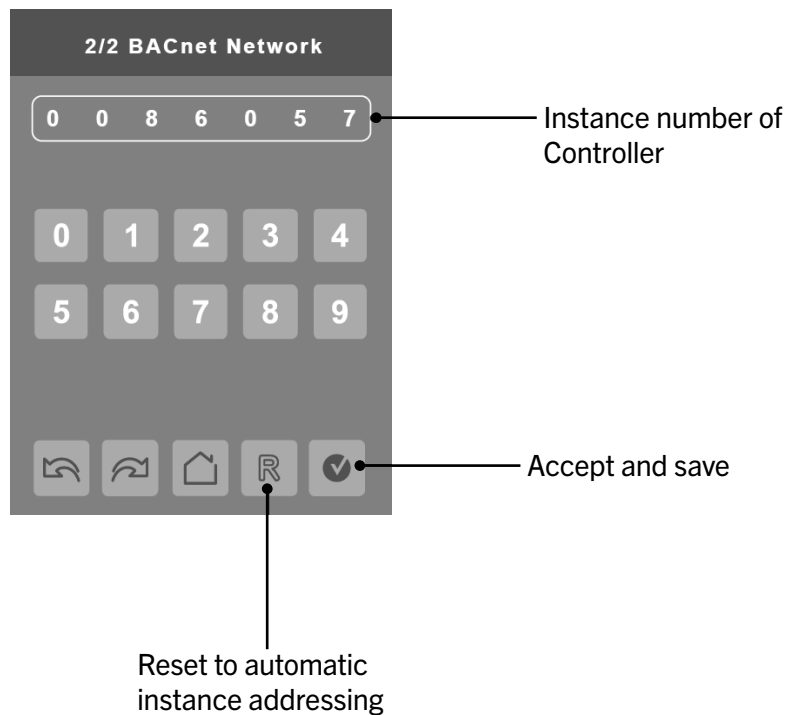

Modbus Network Settings

Modbus network screen shows when Modbus is selected in wried protocol parameter.

The image shows a digital screen titled "Modbus Network". It contains four rows of settings, each with a label and a value in a separate box:

- COM address**: 254
- Network units**: SI
- Baud rate**: 19200
- Parity**: None


At the bottom of the screen, there are five navigation icons: a left arrow, a right arrow, a home icon, a down arrow, and an up arrow.

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Comm address Default value: 254	Communication Address Valid address range is set at 1 to 247 and each Modbus device must have a unique address. Other values not recommended for Modbus. Default value of 254 disables Modbus communication for the Controller. Range: 0 to 254
Network units Default value: SI	Measurement Units Network units transmitted over the Modbus network. NOTE: Use the Temperature scale parameter to change the display units locally on the Controller. Imperial: network units shown as Imperial units. SI: network units shown as International Metric units. Choices: Imperial or SI
Baud rate Default value: 19200	Modbus Baud Rate Automatically detects Modbus baud rate. Choices: 57600, 38400, 19200, 9600, and 4800
Parity Default value: Even	Parity Determines how the parity bit of the character's data frame is set to detect any errors in the sent/receives frame. Choices: None, Odd, and Even

Wi-Fi 1/5

The Wi-Fi Network screen shows only in models with optional Wi-Fi module (VCM8002).

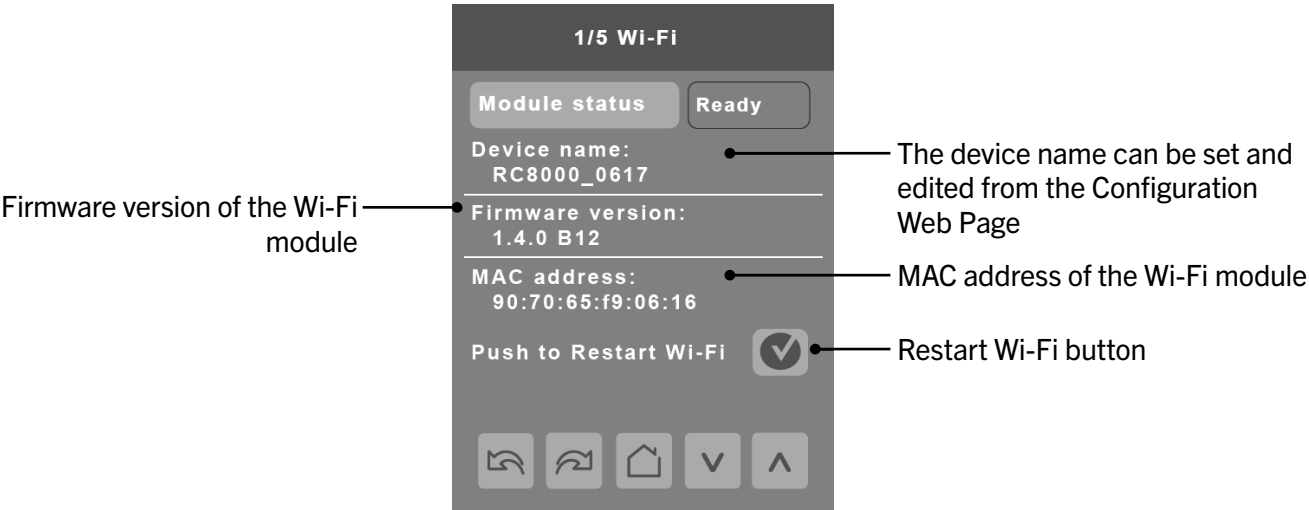

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Module status Read Only MSI315	Wi-Fi Module Status Displays the current status of the Wi-Fi module. It would normally display Ready when the Wi-Fi module is operational. Status value: 1=Offline, 2=Initializing, 3=Ready, 4=Booting, 5=Resetting, 6=Fail, 7=Testing
Device Name Read only CSV4	Wi-Fi Device Name The device name can be set and edited from the Configuration Web Page.
Firmware version Read only CSV5	Wi-Fi Firmware Version Shows the Wi-Fi Module firmware revision number.
MAC address Read only CSV6	MAC Address The MAC address is a unique hardware identifier of the Wi-Fi Module.

Wi-Fi 2/5

The Password needed to connect to the Access Point Wi-Fi network

2/5 Wi-Fi Access Point

Access Point

Enabled

SSID:
RC8000_0617

Password:
65F90617

IP address:
192.168.71.1

↶

↷

🏠

⏴

⏵


The SSID of the Access Point created by the Wi-Fi module. You can add your device to this network to access the Configuration Web Page

When connected to the Access Point, browse to this IP address to access the Configuration Web Page

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Access point	Default value: Disabled	Access Point On this screen the access point can be enabled or disabled as needed. Choices: Enabled or Disabled

Wi-Fi 3/5

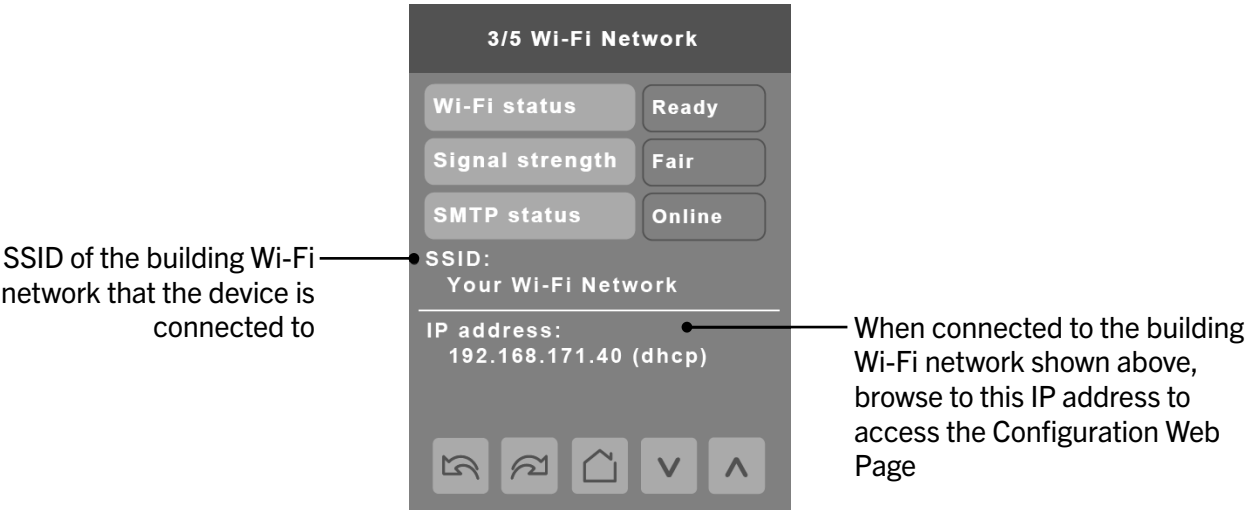

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Wi-Fi status Read Only MSI316	Wi-Fi Status When not connected to a Wi-Fi network the status remains Idle. Once the RC is on your preferred Wi-Fi network, the status will be displayed as Ready. Status value: 1=Idle, 2=Associate, 3=Config., 4=Ready, 5=Online, 6=Disconn., 7=Failure
Signal strength Read Only MSI327	Wi-Fi Network Signal Strength Signal strength of the Wi-Fi network. Range: 1=Unknown, 2=Weak, 3=Fair, 4=Good, 5=Excellent
SMTP status Read Only MSI318	SMTP Server Status Status of the email SMTP server. Email notifications are enabled and configured from the Configuration Web Page. Status value: 1=Unknown, 2=Disabled, 3=Offline, 4=Online
SSID Read only CSV7	Wi-Fi Network SSID SSID of the building Wi-Fi network that the device is connected to. The SSID is set from the Configuration Web Page.
IP address Read only CSV8	Wi-Fi Network IP Address When connected to the building Wi-Fi network shown above, browse to this IP address to access the Configuration Web Page.

Wi-Fi 4/5



Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Facility Expert Read Only MSI319		Facility Expert Enabled Shows whether the Facility Expert system is Disabled or Enabled. Status value: 1=Disabled, 2=Enabled
Status Read Only MSI323		Facility Expert Status Shows the current status of the Facility Expert system. Range: 1=Disabled, 2=Offline, 3=Connect., 4=Online, 5=Failure, 6=Unknown
Last communication time Read Only		Last Communication Time
MAC address Read only CSV6		MAC Address The MAC address is a unique hardware identifier of the Wi-Fi Module.

Wi-Fi 5/5




Parameter Details

Configuration Parameters Default Value		Significance and Adjustments
Factory reset? Default value: No		Erase All Accepting Yes for both and then tapping 'Push to accept' will restore the Wi-Fi module to the factory settings, erase all configuration data and revert the Wi-Fi module firmware to the factory firmware version. NOTES: <ul style="list-style-type: none">• If you lose or forget your password for the Configuration Web Page, you must do a Factory Reset of the Wi-Fi module.• If your Wi-Fi module was connected to Facility Expert, you will need to contact your Facility Expert Administrator before the device can be reconnected after a Factory Reset.
Are you sure? Default value: No		

Wi-Fi BACnet Network Settings

BACnet network screens are shown when the wired protocol is set to BACnet or a Wi-Fi module is installed with BACnet/IP enabled. Only one BACnet protocol can be used at a time, either the wired protocol BACnet MS/TP (BACnet Network screens), or the Wi-Fi BACnet IP (Wi-Fi screens). BACnet/IP is enabled from the Configuration Web Page or the Uploader Tool. BACnet object name, instance number, and range: BACnet IP Status, MSI317, 1=Disabled, 2=Enabled.

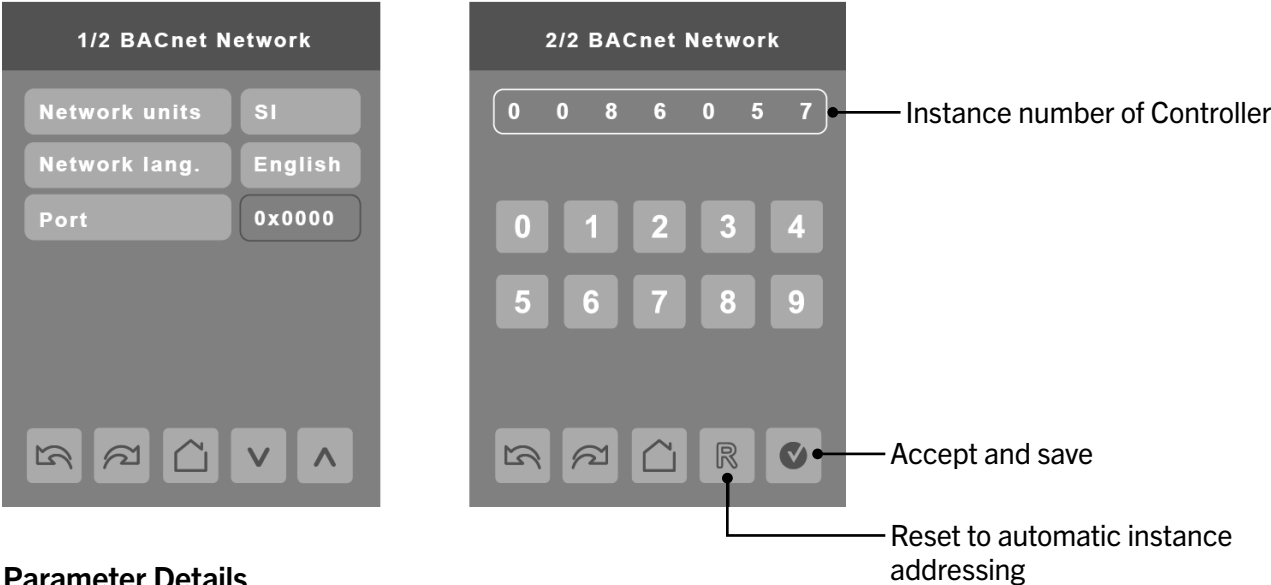

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Network units	Default value: SI MV6	Network Units Network units transmitted over the BACnet network. NOTE: Use the Temperature scale parameter to change the display units locally on the Controller. SI: Network units shown as International Metric units. Imperial: Network units shown as Imperial units. Choices: 1=SI, 2=Imperial
Network lang.	Default value: English MV7	Network Language Network language/object names transmitted over network. Choices: 1=English, 2=French, 3=Spanish
Port	Default value: 0 Read Only	Port The unique short address of Wi-Fi BACnet IP

BACnet Instance Number

The default BACnet instance number is generated by the model number and COM address of the Controller. For example, the instance number of a VT8650U5500BP with a COM address of 57 is generated as “86057.”

The default instance number appears first. To change the instance number, use number pad and press **Accept and save**. The BACnet instance number can also be changed from the Configuration Web Page or the Uploader Tool.

Tap “R” icon to reset to automatic instance addressing.

Configuration 1/11

1/11 Configuration

UI16 config	None
UI17 config	None
UI19 config	None
UI20 config	RS
Setpoint func.	Attach SP
Mode button	Normal

↶
↷
🏠
▼
▲

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
UI16 config Default value: None MV46	UI16 Configuration <p>None: No function will be associated with the input. Input can be used for remote network monitoring.</p> <p>Rem NSB: Remote night setback (NSB) timer clock input. The scheduling gets set as per the binary input and provides low cost setback operation via a dry contact.</p> <p>Motion NO and Motion NC: Advanced PIR occupancy functions using a Normally Open (NO) or Normally Closed (NC) remote PIR motion sensor.</p> <p>Window: Forces system to disable any current heating or cooling action by Controller when window is open.</p> <p>Fan lock: When (G) Fan output is activated, if this input is not activated after 10 seconds, the Controller disables Heat and Cool outputs and display “Fan Lock” alarm.</p> <ul style="list-style-type: none"> • Open contact = No airflow alarm • Closed contact = Airflow present, normal operation <p>Choices: 1=None, 2=Rem NSB, 3=Motion NO, 4=Motion NC, 5=Window, 6=Fan lock</p>
UI17 config Default value: None MV47	UI17 Configuration <p>None: No function associated with input.</p> <p>Door Dry: Controller goes to standby mode when door is opened then closed followed by no presence detection for the next 10 seconds if the local PIR is used in this application. The “Occupancy Command” (refer to “Options” on page 77) must be set to “Local Occupancy” and “Occupancy Source” (refer to page 36) must be set to “Motion”.</p> <p>Override: A closed contact forces the Controller to go in occupied mode. An open contact keeps the current occupancy mode.</p> <p>Filter: backlit flashing filter alarm shows on the Controller screen when input is energized.</p> <p>Service: backlit flashing Service alarm shows on Controller screen when input is energized.</p> <p>Choices: 1=None, 2=Door Dry, 3=Override, 4=Filter, 5=Service</p>

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
UI20 config Default value: RS MV185	UI20 Configuration The UI20 Remote Sensor (RS) can be wired to a room temperature sensor or a mixed air temperature sensor. If RS is selected, make sure the Temp. sensor parameter value is set to Wired, refer to "Configuration 3/11" on page 37. This input will change the RS parameter name from Remote temp. to Mixed air temp., refer to "Service view 1/10" on page 60. None: No function associated with input RS: Remote temperature sensor. MAT: Mixed air temperature sensor. Choices: 1=None, 2=RS, 3=MAT
Setpoint func. Default value: Attach SP MV58	Setpoint Function Local setpoint settings to set the local setpoint interface for the User. Dual SP: "Minimum" Deadband, Heat and Cool Setpoints can be adjusted independently.. Attach SP: "Fixed" Deadband in occupied mode, Heat and Cool setpoints always follow each other, separated by Deadband value (acts like a single setpoint). Choices: 1=Dual SP, 2=Attach SP
Mode button Default value: Normal MV111	Mode Button Changes the behavior of the system mode button functionality and hides/shows temperature setpoints on main screen. Normal: System mode button switches between 'Off', 'Auto', 'Cool' and 'Heat'. Also displays temperature Setpoints on main screen. Off-Auto: System mode button switches between 'Off' and 'Auto'. Hides temperature Setpoints on main screen. NOTE: Setting 'Mode button' to 'Off-Auto' forces the 'Setpoint func.' parameter to 'Attach SP'. Choices: 1=Normal, 2=Off-Auto

Configuration 2/11

2/11 Configuration

Fan cont. heat	On
Fan delay	On
Standby mode	Absolute
Standby diff.	4.0 °F
Power-up delay	10 Sec.
Occupancy src	Motion

↶
↷
🏠
▼
▲

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Standby mode Default value: Absolute MV11	Standby Mode Configuration Standby setpoints used for control. Absolute: Standby entered values are used for standby mode. Offset: Occupied setpoints +/- Standby diff. used for standby mode. Choices: 1=Absolute, 2=Offset
Standby diff. Default value: 4°F (2°C) AV46	Standby Temperature Differential When Standby mode is set to 'offset', standby setpoints are calculated as follows: Standby cool: Cool setpoint + Standby diff. Standby heat: Heat setpoint - Standby diff. Refer to "Setpoints Screens" on page 53 to define Standby cool and Standby heat values. Range: 1 to 5°F (0.5 to 2.5°C), using 1.0 °F (0.5 °C) increments.
Power-up delay Default value: 10 Sec. AV76	Power-up Delay On initial power up of the Controller there is a delay before any operation is authorized (fan, cooling or heating). This can be used to sequence the start up of multiple Controllers in one location. Range: 10 to 120 seconds
Occupancy src Default value: Motion MV110	Occupancy Source Motion: Occupancy status is received from a motion sensor from a wired, wireless or local PIR sensor Schedule: Occupancy status is determined by the schedule Mot. occ: Occupied when scheduled occupied AND when motion is detected. Mot. unoc: Occupied when scheduled occupied OR when motion is detected. Choices: 1=Motion, 2=Schedule, 3=Mot. occ., 4=Mot. unoc.

Configuration 3/11

3/11 Configuration

Standby time	0.5 hrs
Unocc. time	0.0 hrs
Temp. occ. time	2.0 hrs
Temp. sensor	Wired
Deh. hysteresis	5 %RH
Deh. lockout	Disabled

↶
↷
🏠
▼
▲

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Standby time Default: 0.5 hrs AV67	Standby Time Time between the moment where the PIR cover detects last movement in the area, and the time which the Controller stand-by setpoints become active. Note: This parameter is not active when the “Door” function is used (wired or wireless). Range: 0.5 to 24.0 hours (0.5 hour increments)
Unocc. time Default: 0.0 hrs AV68	Unoccupied Time Time between the moment where the Controller toggles to stand-by mode, and the time which the Controller unoccupied mode and setpoints become active. Note: Default value of 0.0 hours disables the unoccupied timer. This prevents the Controller from being able to switch from stand-by mode to unoccupied mode when PIR functions are used. Range: 0.0 to 24.0 hours (0.5 hour increments)
Temp. occ. time Default value: 2 hrs AV62	Temporary Occupancy Time The time the Controller stays in override mode before reverting back to unoccupied mode. When the Controller is in unoccupied mode, pressing the on-screen Override icon or closing the contact on UI17, configured as “Remote Override”, sets the Controller to Override mode for defined time period, and uses the Occupied Cooling and Heating setpoints. Range: 0.0 to 24.0 hours
Temp. sensor Default value: Wired MSI309, MV145	Room Temperature Sensor Sets the source of the indoor room temperature. This parameter allows the user to designate either the Controller or any of the paired wireless devices that support temperature to act as the source for the room temperature. Wired: sets the thermistor connected to UI20 (RS) as the source to report room temperature. Internal: sets the Controller as the source for the room temperature. WL 1 to WL 20: sets the selected Zigbee wireless device as the source for the room temperature. Only one device can be selected. Note: The Controller uses the internal temperature sensor only if the UI20 (RS) terminal is empty. If a valid temperature sensor is connected to the UI20 terminal, the Controller will use the sensor as the control point. Disconnecting the sensor, or if the sensor is faulty, the Controller will automatically revert to its internal temperature sensor. Choices: 1=Wired, 2=Internal, 3= WL IO, 4 to 23=WL 1 to WL 20

Configuration 4/11

4/11 Configuration






Cooling CPH	4
Heating CPH	4
Frost protec.	Off
BO1 aux. config	NO
Anti short cycle	2 min
Min sup. heat	64.0 °F

↶
↷
🏠
▼
▲

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Frost protec. Default value: Off MV55	Frost Protection If the Room Temperature drops below 42°F (5.6°C), the Fan and the Heat will be activated until the Room Temperature rises over 42°F (5.6°C). Off: No room frost protection On: Room frost protection enabled in all system modes at 42°F (5.6°C). Frost protection is enabled even if System mode is 'Off'. Choices: 1=Off, 2=On
BO1 aux. config Default value: NO MV92	BO1 Auxiliary Output Configuration Output to directly follow the main Occupancy and Fan On commands. NO: Occ or St-By = Contact Closed / Unoccupied = Contact Opened NC: Occ or St-By = Contact Opened / Unoccupied = Contact Closed. Choices: 1=NO, 2=NC
Anti short cycle Default value: 2 min AV86	Anti Short Cycle Time Minimum On time and minimum Off time of operation time for stages. IMPORTANT: anti-short cycling can be set to 0 minutes for equipment that possess their own anti cycling timer. Do not use this value unless the equipment is equipped with an internal timer. Failure to do so can damage the equipment. Range: 0 to 5 minutes

Configuration 5/11

5/11 Configuration	
Prop. band	3.0
Heat stages	2
Cool stages	2
Econo. config	Off
Changeover SP	55.0 °F
Mech. cooling	Off
    	

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments																														
Prop. band Default value: 3.0 AV65	Proportional Band Adjusts proportional band used by Controller PI control loop. Note: Default value of 3 gives satisfactory operation in most normal installation cases. The use of a superior proportional band different than the factory value is normally warranted in applications where Controller location is problematic and leads to unwanted cycling of the unit. A typical example is a wall mounted Controller installed between return and supply air feeds and is directly influenced by the supply air stream of unit. Range: 3 to 10 <table><tr><th>Value</th><th colspan="2">Effective Proportional Band</th></tr><tr><td></td><th>°F</th><th>°C</th></tr><tr><td>3.0</td><td>4°</td><td>1.2°</td></tr><tr><td>4.0</td><td>4°</td><td>1.7°</td></tr><tr><td>5.0</td><td>5°</td><td>2.2°</td></tr><tr><td>6.0</td><td>6°</td><td>2.8°</td></tr><tr><td>7.0</td><td>7°</td><td>3.3°</td></tr><tr><td>8.0</td><td>8°</td><td>3.9°</td></tr><tr><td>9.0</td><td>9°</td><td>5.0°</td></tr><tr><td>10.0</td><td>10°</td><td>5.6°</td></tr></table>	Value	Effective Proportional Band			°F	°C	3.0	4°	1.2°	4.0	4°	1.7°	5.0	5°	2.2°	6.0	6°	2.8°	7.0	7°	3.3°	8.0	8°	3.9°	9.0	9°	5.0°	10.0	10°	5.6°
Value	Effective Proportional Band																														
	°F	°C																													
3.0	4°	1.2°																													
4.0	4°	1.7°																													
5.0	5°	2.2°																													
6.0	6°	2.8°																													
7.0	7°	3.3°																													
8.0	8°	3.9°																													
9.0	9°	5.0°																													
10.0	10°	5.6°																													
Heat stages Default value: 2 stages AV87	Number of Heating Stages Sets number of Heating Stages applicable to 2 stage models only. 0 Stages: Only (U011) modulating 0-10Vdc output is used for Heating. W1 & W2 are disabled. 1 Stage: Only W1 (B08) terminal is used. W2 is disabled. 2 Stages: Both W1 (B08) and W2 (U09) terminals are used in sequence. Choices: 0, 1, or 2 stages																														

Configuration 6/11

6/11 Configuration

Heat lockout

120.0 °F

Cool lockout

-40.0 °F

Discharge HL

120.0 °F

Discharge LL

45.0 °F

SH lockout

32.0 °F

FA range

0 CFM

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Heat lockout		
Default value: 120°F (49°C)		
AV91		
		Heating Lockout from Outside Air Temperature Disables mechanical heating operation when Outdoor Temperature is higher than the “Heating Lockout” value. The Outdoor Temperature value could be received from a sensor connected directly to the Controller (UI23) or via a BACnet front end (network). Range: -15°F to 120°F (-26°C to 49°C)

Configuration 7/11

This configuration screen is not used on the MP3 Series heaters.

Configuration 8/11

8/11 Configuration


Application	Rooftop
High BP	90.0 °F
Low BP	-12.0 °F
Comf. or econ.	Comfort
Rev. valve	O
Comp. interlock	Off



Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Application		Application
Default value: Rooftop		Sets Controller operating logic for either a Rooftop or a Heat Pump application.
MV119		Note: if the Heat Pump Unit (HPU) does not have an O/B terminal (reversing valve), set this parameter to Rooftop.
		Choices: 1=Rooftop, 2=Heatpump

Configuration 9/11

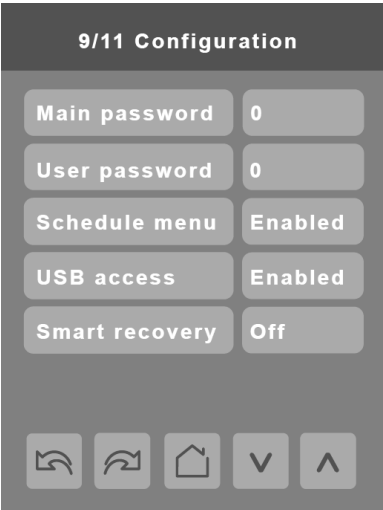

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Main password Default value: 0 AV56	Main Password Sets a protective access password to prevent unauthorized access to configuration menu parameters. A default value of “0” will not prompt for a password or lock access to the configuration menu. Range: 0 to 9999.
User password Default value: 0 AV57	User Password Sets a protective access password to prevent User unauthorized access to main screen adjustments. A default value of “0” will not prompt for a password. Range: 0 to 9999.
Schedule menu Default value: Enabled MV73	Schedule Menu Toggles activation of schedule menu direct access. Disabled: Schedule Menu can only be accessed through the Setup Menu screens. Enabled: Schedule Menu is directly accessible from the main screen via a touch in the upper corner. Dis. no. clk: Schedule Menu can only be accessed through the Setup Menu screens. Clock does not show. En. no. clk: Schedule Menu is directly accessible from the main screen via a touch in the upper corner. Clock does not show. Choices: 1=Disabled, 2=Enabled, 3=Dis.no.clk, 4=En.no.clk
USB access Default value: Enabled	USB Access Enables/disables USB communication with the Controller (RC). Enabled: USB communication with the RC is enabled, so the Uploader tool can be used to upgrade firmware, standby images, Lua script etc. Disabled: USB communication with the RC is disabled, so the Uploader tool cannot be used with the device. Choices: Enabled, Disabled

Parameter Details (cont.)

Configuration Parameters	Default Value	Significance and Adjustments
Smart recovery		Enable Smart Recovery
Default value: Off		Off: No smart recovery. The occupied schedule time is the time at which the system will restart.
MV71		On: Smart recovery active. The occupied schedule time is the time at which the desired occupied temperature will be attained. The Controller automatically optimizes the equipment start time. In any case, the latest a system will restart is 10 minutes prior to the occupied period time.
		Smart recovery is automatically disabled if UI16 is configured to remote NSB.
		Choices: 1=Off, 2=On

NOTICE**UNAUTHORIZED USB ACCESS**

When commissioning is complete, it is recommended to minimize access points on the Controller:

- Disable USB access via the Configuration screen or Commissioning via USB on the Admin tab of the Configuration Web Page
- Enable main password to lock the setup screens
- Enable user password to lock the main screen adjustments (optional)
- Lock the display screen (optional)
- Use strong and unique Wi-Fi Module admin password

Failure to follow these instructions may lead to unauthorized users accessing the Wi-Fi Module or the Controller.

Configuration 10/11

10/11 Configuration

Calib. temp.

0.0 °C

Calib. OS temp.

0.0 °C

Calib. humid.

0.0 %RH

RH sensor

Internal

CO2 source

None

▼

▲

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Calib. temp. Default value: 0°F (0°C) AV7		Calibrate Room Temperature Sensor Room temperature sensor calibration. Offset can be added or subtracted to actual displayed room temperature. Range: ± 5.0°F (± 2.5°C)
Calib. OS temp. Default value: 0°F (0°C) AV74		Calibrate Outside Temperature Sensor Outside air temperature sensor calibration. Offset that can be added or subtracted to the actual displayed outdoor temperature. Range: ± 5.0°F (± 2.5°C)

Configuration 11/11



Parameter Details

Configuration Parameters Default Value		Significance and Adjustments
Erase all? Default value: No		Erase All Accepting Yes for both and then tapping 'Push to accept' returns all values to the factory default settings with the exception of the following: <ul style="list-style-type: none">• COM address• Network Units• Network Language• Baud Rate• BACnet Instance• Device Name• Screen Contrast• Lua Script Note: Node type in Zigbee Network screen returns to default value (Router).
Are you sure? Default value: No		

Setpoints 1/2



Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Occ. heat Default value: 72°F (22°C) AV39	Occupied Heat Setpoint Heating Temperature setpoint used by the Controller when in Occupied mode. Range: 40 to 90°F (4.5 to 32.0°C)
Standby heat Default value: 69°F (20.5°C) AV41	Standby Heat Setpoint Heating Temperature setpoint used by the Controller when in Standby mode. Range: 40 to 90°F (4.5 to 32.0°C)
Unocc. heat Default value: 62°F (17°C) AV43	Unoccupied Heat Setpoint Heating Temperature setpoint used by the Controller when in Occupied or Override mode. Range: 40 to 90°F (4.5 to 32.0°C)

Setpoints 2/2

The screenshot shows a screen titled "2/2 Setpoints" with a list of parameters and their current values:

- Default heat: 22.0 °C
- Min. deadband: 1.5 °C
- Max. heating: 32.0 °C
- Min. cooling: 12.0 °C
- Supply air SP: 12.5 °C
- Dehum. SP: 50 %RH

At the bottom, there are five navigation icons: a left arrow, a right arrow, a house icon, a down arrow, and an up arrow.

Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Default heat Default value: 72°F (22°C) AV55		Default Heating Setpoint Used for hospitality applications in stand-alone mode only to reset the occupied setpoints when a new guest enters the room. When the Controller is in unoccupied mode, any movement detected by a wired, wireless, or local PIR sensor changes the occupancy mode to occupied modes and uses the "Default Heating Setpoint" as the new occupied setpoints. NOTE: This functionality is only valid when Stand-by mode = Offset and "Setpoint Func" is set to "Attached". Range: 65 to 80°F (18.5 to 26.5°C)
Min. deadband Default value: 3°F (1.5°C) AV63		Minimum Deadband Temperature offset between the Cooling and Heating setpoints to ensure that Cooling setpoint is always warmer than the Heating setpoint Cooling setpoint ≥ (Heating setpoint + Deadband) Range: 2 to 5°F (1.0 to 2.5°C)
Max heating Default value: 90°F (32°C) AV58		Heating Setpoint Limit Maximum Occupied, Unoccupied, Standby, and Override Heating setpoints limit. Range: 40 to 90°F (4.5 to 32.0°C)

Display 1/3

1/3 Display

User HMI	0
Color	White
Main display	Temp.
Standby screen	No
Lock screen	No
Contrast	0

Navigation icons: Back, Home, Up, Down, Exit

1/3 Display

User HMI	0
Color	White
Main display	Temp.
Standby screen	No
Lock screen	No
Contrast	-2

Navigation icons: Back, Home, Up, Down, Exit

IPS Screen


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
User HMI Default value: 0 AV2	User HMI Sets layout of icons on the home screen for various applications. For more information, refer to “Customized User HMI Display” on page 9. Range: 0 to 12
Color Default value: White MV2	HMI Color Change background color of the display screen. Choices: 1=White, 2=Green, 3=Blue, 4=Grey, 5=Dark grey, 6=Pink, 7=Purple, 8=Red, 9=Orange, 10=Black
Main display Default value: Temp. MV3	Main Display Shows temperature or setpoint on main display. Choices: 1=Temp., 2=Setpoint
Standby screen Default value: No MV32	Standby Screen When the device is left unattended for 150 seconds, the standby image will appear. A custom image can be uploaded using the Uploader Tool. No: No Stand by image (Screen dims when no motion is detected) Yes: Stand by Image is displayed after 150 seconds Occ. Only: Standby image displays after 150 seconds. Screen turns off after 30 minutes only in occupied or override mode. Screen sav: Standby image displays after 150 seconds. Screen turns off after 30 minutes only in unoccupied or standby mode Choices: 1=No, 2=Yes, 3=Occ. Only, 4=Screen sav
Lock screen Default value: No MV148	Lock Screen Prevents the user from accessing the Controller until a password is entered. Screen lockout starts 150 seconds after no activity on the Controller (when standby image appears). This functionality is enabled only if the below conditions are met: <ul style="list-style-type: none"> • Standby image loaded • Standby Screen = “Yes” or “Screen” • User Password = not 0 Choices: 1=No, 2=Yes

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Contrast Default value: 0	Contrast Control screen contrast and brightness. Range: -5 to 5
Contrast Read Only	IPS Screen Contrast Starting with firmware revision 2.6, some RCs are shipped with an In-Plane Switching (IPS) screen that does not need contrast adjustment. Thus, the contrast parameter is read only with a default value of -2. To identify an RC with an IPS screen, "IPS" will appear on the RC's box label. Note: RCs with an IPS screen cannot be downgraded to a firmware revision older than 2.6. Display Default: -2

Display 2/3

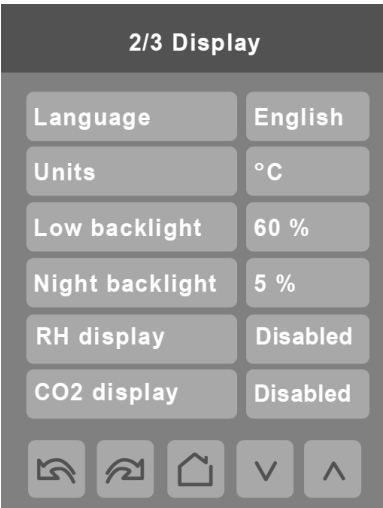

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Language Default value: English MV4	Display Language Select language for main display. Choices: 1=English, 2=French, 3=Spanish, 4=Chinese, 5=Russian, 6=Arabic, 7=Bulgarian, 8=Czech, 9=Danish, 10=Dutch, 11=Finnish, 12=German, 13=Hungarian, 14=Indones., 15=Italian, 16=Norwegian, 17=Polish, 18=Portug., 19=Slovak, 20=Swedish, 21=Turkish, 22=Japanese, 23=Hebrew
Units Default value: °C MV51	Temperature Scale Changes the local display units. Refer to Network Units to change the network units broadcasted over the network. Choices: 1=°C for SI, 2=°F for Imperial.
Low backlight Default value: 60% AV3	Low Backlight Sets display backlight intensity. This feature is activated (screen dims) 150 seconds after no activity on the Controller. Adjustable: 0 to 100%.
Night backlight Default value: 5% AV4	Night Backlight Sets backlight display intensity. Parameter only available for models with motion/light detectors. The screen backlight progressively decreases down to this setting when room is dark. This feature is used mostly in hospitality applications when a darker non obtrusive lighting level is desired when room is dark. Adjustable: 0 to 100%.


Display 3/3



Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Fan status Default value: Enabled MV180	Display the Fan Status icon Hides the fan status in the upper right corner of the User HMI display. Applicable to all User HMI configurations where the fan status is shown. Refer to "User HMI Show/Hide Options" on page 11. Choices: 1=Disabled, 2=Enabled
System status Default value: Enabled MV181	Display the System Status icon Hides the system status in the upper right corner of the User HMI display. Applicable to all User HMI configurations where the system status is shown. Refer to "User HMI Show/Hide Options" on page 11. Choices: 1=Disabled, 2=Enabled
Help button Default value: Enabled MV182	Display the Help button Hides the help button in the lower right corner of the User HMI display. Applicable to all User HMI configurations where the help button is shown. Refer to "User HMI Show/Hide Options" on page 11. Choices: 1=Disabled, 2=Enabled


Service View 1/10

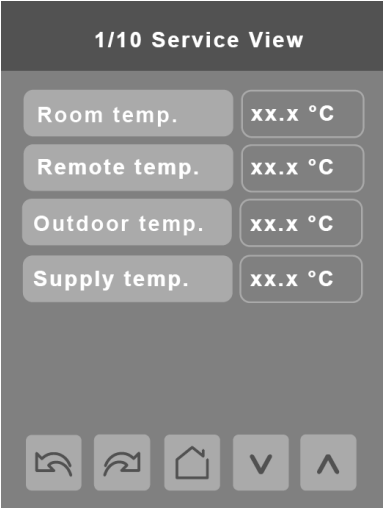

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Room temp. Read Only AV100	Room Temperature Shows the current room temperature from the configured temperature source.
Remote temp. Read Only AV105	UI20 Remote Temperature Shows the temperature of the sensor connected to UI20 (RS) terminal. The UI20 config parameter value must be set to RS, refer to “Configuration 1/11” on page 29.

Service View 2/10

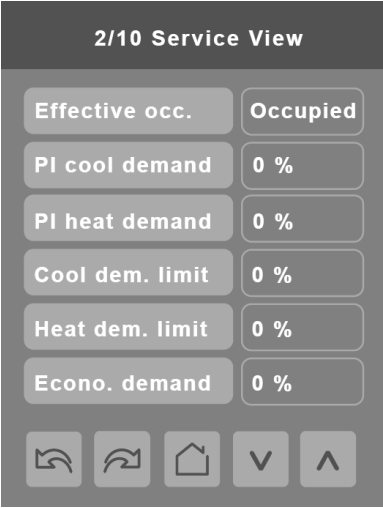

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Effective occ. Read Only MSI33	Effective Occupancy Shows as occupied, unoccupied, standby or override. Display Readings: 1=Occupied, 2=Unoccupied, 3=Override, 4=Standby
PI heat demand Read Only AO21	PI Heating Demand Proportional Integral Heating Demand Display Readings: 0-100%

Service View 3/10

Only for models with onboard Zigbee or optional Zigbee add-on module.



Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
UI16 binary Read Only BI29	UI16 Binary Input Shows status of input. Display Readings: 1=Activated, 2=Not activ
UI17 binary Read Only BI30	UI17 Binary Input Shows status of input. Display Readings: 1=Activated, 2=Not activ
Zigb. PIR inst. Read Only BV200	Zigbee PIR Sensor Installed Shows if Zigbee Passive Infrared Sensor wireless motion sensor is paired to a Controller or not. NOTE: This parameter is for Zigbee wireless motion sensors only. Display Readings: 1=Off, 2=On
Zigb. sens. mot. Read Only BV201	Zigbee Sensor Motion Shows if motion is detected by any of the Zigbee wireless motion sensors. NOTE: This parameter is for Zigbee wireless motion sensors only. Display Readings: 1=Motion, 2=No Motion

Service View 4/10

This service view screen is not used on the MP3 Series heaters.

Service View 5/10



Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Frost alarm Read Only BV43		Frost Protection Alarm Shows if Frost Alarm is active or not. Display Readings: 1=Off, 2=On
Recovery Read Only BV40		Smart Recovery Status Shows if Smart Recovery is active or not. Display Readings: 1=Off, 2=On

Service View 6/10



Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
UO9 config Read Only MV96	UO9 Configuration Display Readings: 1=Analog, 2=Binary, 3=Relay RC, 4=Relay RH
UO10 config Read Only MV97	UO10 Configuration Display Readings: 1=Analog, 2=Binary, 3=Relay RC
UO11 config Read Only MV98	UO11 Configuration Display Readings: 1=Analog, 2=Binary
UO12 config Read Only MV99	UO12 Configuration Display Readings: 1=Analog, 2=Binary

Service View 7/10




Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
UI19 type Read Only MV140	UI19 Input Type Display Readings: 1=Therm., 2=Binary, 3=Voltage
UI20 type Read Only MV141	UI20 Input Type Display Readings: 1=Therm., 2=Binary, 3=Voltage
UI22 type Read Only MV142	UI22 Input Type Display Readings: 1=Therm., 2=Binary, 3=Voltage
UI23 type Read Only MV143	UI23 Input Type Display Readings: 1=Therm., 2=Binary, 3=Voltage
UI24 type Read Only MV144	UI24 Input Type Display Readings: 1=Therm., 2=Binary, 3=Voltage

Service View 8/10

This service view screen is not used on the MP3 Series heaters.


Service View 9/10

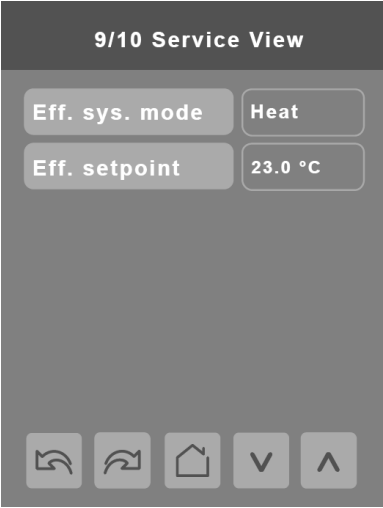

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Eff. sys. mode Read Only MSI314	Effective System Mode Shows the current operating mode of the system. For example, when the system is in Auto mode, this parameter shows whether it is currently heating or cooling. Display Readings: 1=Cool, 2=Heat
Eff. setpoint Read Only AI329	Effective Setpoint Shows the tempertature setpoint value currently in use by the system.

Service View 10/10

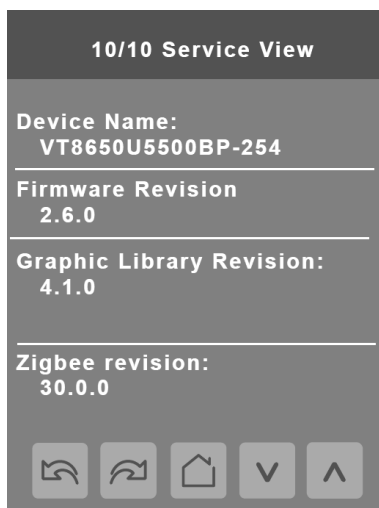


The Device Name (BACnet name) consists of the model number followed by the COM address (MAC address). The BACnet name can be changed via the BACnet front end and the new name appears on the above screen.

For example, when a VT8650U5500BP Controller with a MAC address of 41 is connected to a network, its default Device Name is VT8650U5500BP-41 and its default BACnet Device ID is 86041.

Firmware Revision shows the Firmware version currently installed on the Controller. Upgrading to a newer Firmware version deletes the previous Firmware version, however it is possible to set the Controller to an earlier Firmware version with the Uploader Tool.

Zigbee Revision shows the Firmware version of an onboard Zigbee or optional Zigbee add-on module.

Test Outputs Screens

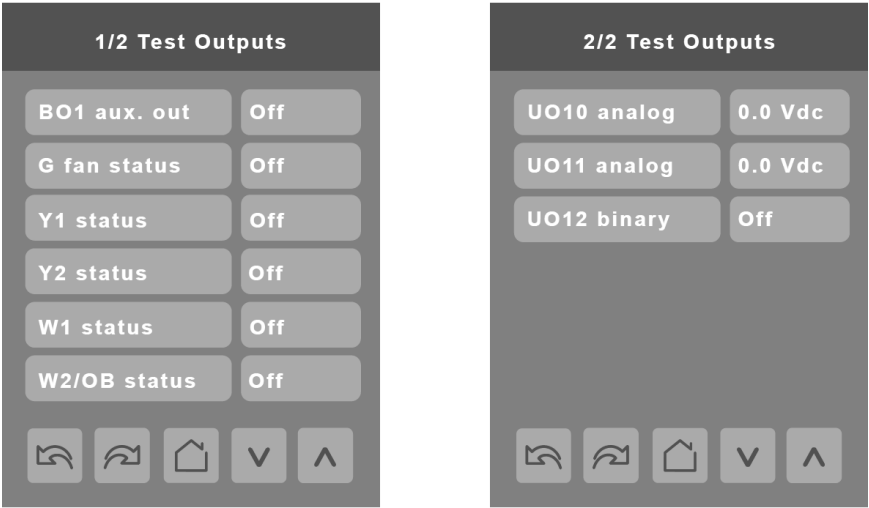

NOTICE

SAFE OPERATION ENVIRONMENT

Use high caution when manually enabling outputs so as to not cause damage to equipment. It is the responsibility of the Installer or Service Contractor to maintain a safe operation environment during usage.

Failure to follow these instructions can result in equipment damage.

Note 1: The Test Outputs screen allows manual override of specified outputs. After any output state is overridden, the command is cancelled after 1 minute of screen inactivity (auto exit to main screen) or when page is exited.

Note 2: These parameters can also be changed via BACnet and the changed parameter background will turn red to indicate the parameter’s value had been overridden. The overridden value remains even if the user exits the main screen.

Note 3: Test Outputs values are LIVE. Any output gets displayed immediately for any value change according to the following:

- 1. If any BACnet priority array (1–16) includes a value, the displayed state background shows in red.
- 2. When toggling a value on the screen, the output directly energizes according to the selected value.
- 3. After any output state gets modified, all overrides get cancelled after 1 minute of button inactivity, or if you scroll from one screen to another screen.

Note 4: Test Outputs UO10 to UO12 are dependent on control type configuration. If mode is set to Floating or On/Off, binary options show. If mode is set to Analog, analog options show.

Parameter Details

Note: This controller has been loaded with a custom program specific to MP3 Series heaters. Default values shown in **bold** correspond to the heater-specific value in [].

Configuration Parameters Default Value		Significance and Adjustments
B01 aux. out Default value: Off B098	[BANK #1 Enable]	B01 Auxiliary Binary Output Choices: 1=Off, 2=On
G fan status Default value: Off B025	[BANK #4 Enable]	G Fan Status Choices: 1=Off, 2=On
Y1 status Default value: Off B026	[BANK #3 Enable]	Y1 Status Choices: 1=Off, 2=On
Y2 status Default value: Off B027	[BANK #2 Enable]	Y2 Status Choices: 1=Off, 2=On
U09 analog Default value: 0.0 Vdc AO125	[BANK #1 Call for Heat]	U09 Analog Output Range: 0.0 Vdc to 10.0 Vdc, using 0.1 Vdc increments
U010 analog Default value: 0.0 Vdc AO126	[BANK #2 Call for Heat]	U010 Analog Output Range: 0.0 Vdc to 10.0 Vdc, using 0.1 Vdc increments
U011 analog Default value: 0.0 Vdc AO123	[BANK #3 Call for Heat]	U011 Analog Output Range: 0.0 Vdc to 10.0 Vdc, using 0.1 Vdc increments
U012 analog Default value: 0.0 Vdc AO124	[BANK #4 Call for Heat]	U012 Analog Output Range: 0.0 Vdc to 10.0 Vdc, using 0.1 Vdc increments

Language Selection Screens



Only English, French, Spanish, Chinese, and Russian are enabled by default and are accessible to users cycling through languages on the display settings menu screen. To change the language selection settings, tap a language on the screen and then use the arrow buttons to disable or enable it.

NOTE: English is always enabled.


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
French Default value: Enabled MV101	French Choices: 1=Disabled, 2=Enabled
Spanish Default value: Enabled MV102	Spanish Choices: 1=Disabled, 2=Enabled
Chinese Default value: Enabled MV103	Chinese Choices: 1=Disabled, 2=Enabled
Russian Default value: Enabled MV104	Russian Choices: 1=Disabled, 2=Enabled

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Arabic Default value: Enabled MV120	Arabic Choices: 1=Disabled, 2=Enabled
Czech Default value: Enabled MV122	Czech Choices: 1=Disabled, 2=Enabled
Danish Default value: Enabled MV123	Danish Choices: 1=Disabled, 2=Enabled
Dutch Default value: Enabled MV124	Dutch Choices: 1=Disabled, 2=Enabled
Finnish Default value: Enabled MV125	Finnish Choices: 1=Disabled, 2=Enabled
German Default value: Enabled MV126	German Choices: 1=Disabled, 2=Enabled
Hebrew Default value: Enabled MV156	Hebrew Choices: 1=Disabled, 2=Enabled
Hungarian Default value: Enabled MV127	Hungarian Choices: 1=Disabled, 2=Enabled
Indonesian Default value: Enabled MV128	Indonesian Choices: 1=Disabled, 2=Enabled
Italian Default value: Enabled MV129	Italian Choices: 1=Disabled, 2=Enabled
Japanese Default value: Enabled MV155	Japanese Choices: 1=Disabled, 2=Enabled
Norwegian Default value: Enabled MV130	Norwegian Choices: 1=Disabled, 2=Enabled
Polish Default value: Enabled MV131	Polish Choices: 1=Disabled, 2=Enabled
Portuguese Default value: Enabled MV132	Portuguese Choices: 1=Disabled, 2=Enabled
Slovak Default value: Enabled MV133	Slovak Choices: 1=Disabled, 2=Enabled
Swedish Default value: Enabled MV134	Swedish Choices: 1=Disabled, 2=Enabled
Turkish Default value: Enabled MV135	Turkish Choices: 1=Disabled, 2=Enabled


Clock Schedule Screens

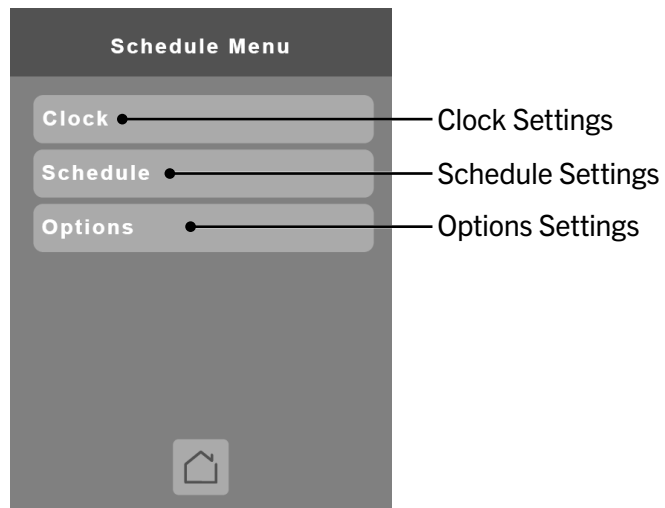

Note: The Clock- Schedule Menu screen is directly accessible from the main setup screen.

Clock

The Clock settings screen allows the device’s internal time settings to be changed (current time, day, month, year, and weekday options), as well as to choose between a 12 hour AM/PM display or 24 hour display.

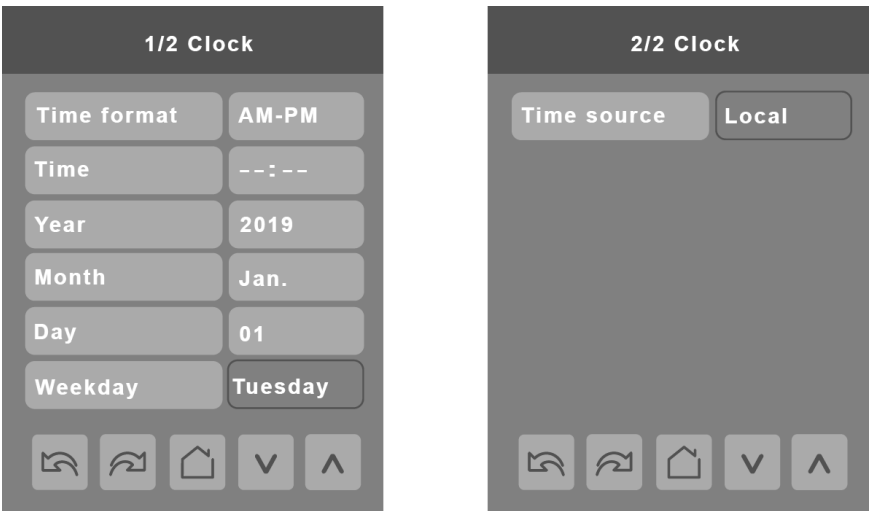


Parameter Details

Configuration Parameters		Default Value	Significance and Adjustments
Time format		Default value: AM-PM	MV5
Time		Default value: current time at power up	Time
Year		Default value: 2019	Year
Month		Default value: Jan.	Month
Day		Default value: 1	Date
Weekday		Default value: Monday	Current Day
Time source		Default value: None	Time Source
Read Only		MSI325	

Schedule

There are seven different schedule setting screens, one for each day of the week. Each day can have different scheduled events where the Controller is set to Occupied status or back to Unoccupied status. The Controller can use the appropriate setpoints (back and forth) up to three times per day.

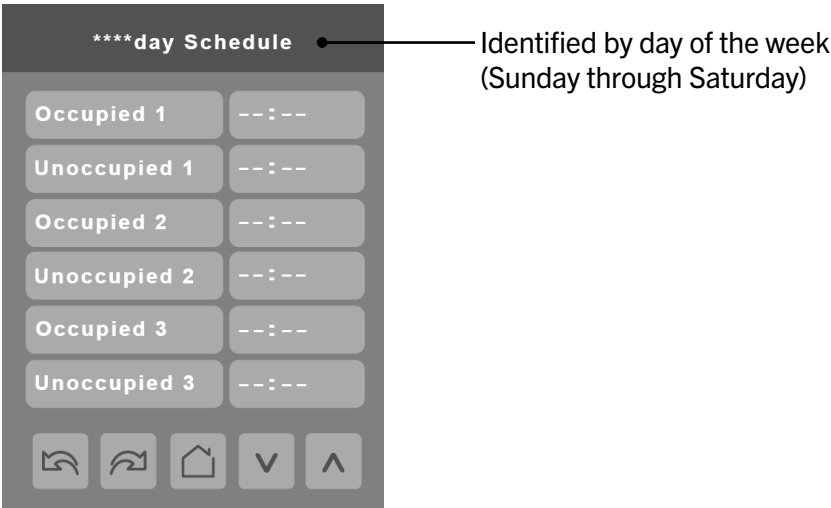


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Occupied 1 - 3 Default value: None	Occupied 1 - 3 Defines a time when the Controller is automatically set to use the Occupied setpoint. Note: There are 3 separate Occupied parameter entries Range: 00:00 - 23:59
Unoccupied 1 - 3 Default value: None	Unoccupied 1 - 3 Defines a time when the Controller is automatically set to use the Unoccupied setpoint. Note: There are 3 separate Occupied parameter entries Range: 00:00 - 23:59

Options

The options settings allow the Controller to function in Occupied or Unoccupied mode following a defined Schedule type set by the user.

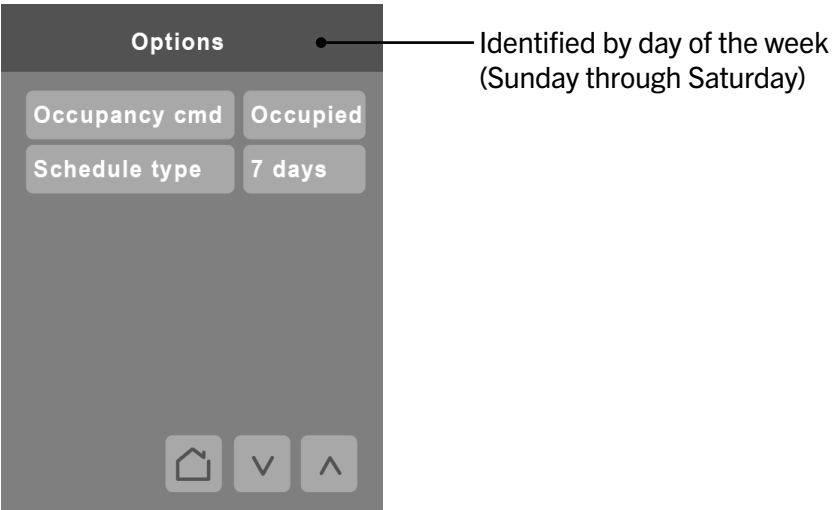

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Occupancy cmd Default value: Occupied MV10	Occupancy Command Loc occ: occupancy is determined by local sequences (either PIR or schedule, as configured under Occ. source). Occupied: force occupied mode. Unocc: force unoccupied mode. Choices: 1=Loc occ, 2=Occupied, 3=Unocc.
Schedule type Default value: 7 days MV136	Schedule Type 7 days: Independent scheduling identified by day of the week (Sunday - Saturday) 5+1+1 days: Weekdays scheduling and Independent Weekend scheduling identified as Weekdays, Saturday and Sunday 5+2 days: Weekdays scheduling and Weekend scheduling identified as Weekdays and Weekend Choices: 1=7 days, 2=5+2 days, 3=5+1+1 day

Automatic Demand Response (ADR) Screen

Automatic Demand Response (ADR) feature is used to reduce energy load when electric grid contingencies threaten supply-demand balance.

ADR

Permission

Off

Shed status

Off

Shed demand

Off

Shed offset

2.0 °C

Shed override

Off

⏮

⏪

⏩

⏭

Parameter Details


Configuration Parameters Default Value	Significance and Adjustments
Permission Default value: Off MV152	ADR Permission Used to permit the ADR to be applicable or not to change the Controller setpoints setting or not. Off: The Load Shedding Demand will not be permitted. On: The Load Shedding Demand will be permitted. Choices: 1=Off, 2=On
Shed status Default value: Off Read Only BV49	Load Shedding Status Displays the status of the Load Shedding Demand, whether it is active (On) or not (Off). The Load Shedding status is On when the Permission is On, Shed demand is On, and the Shed Override is Off. Off: Load Shedding Demand is not activated. On: Load Shedding Demand is activated. Display Readings: 1=Off, 2=On
Shed demand Default value: Off Read Only BV48	Load Shedding Demand Sets the request to initiate Load Shedding. This demand can only be set through BACnet by the local Utility company. Off: No Load Shedding Demand is received or the Shedding demand is disabled. On: Received the Load Shedding Demand or received the signal to activate Load shedding. Display Readings: 1=Off, 2=On

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Shed offset Default value: 4°F (2°C) AV211	Load Shedding Offset Used to change the effective setpoints in occupied, standby and unoccupied modes. For example, when “Shed status” is On and Controller is in occupied mode: The cooling setpoint is calculated as follows: Occupied cooling setpoint = occupied cooling setpoint + Load shedding offset. The heating setpoint is calculated as follows: Occupied heating setpoint = occupied heating setpoint - Load shedding offset. Choices: 4°F to 10°F (2°C to 5.5°C)
Shed override Default value: Off Read Only BV50	Load Shedding Override Displays whether the user disabled the ADR request by the utility company. When the demand shed is applied, the user can override the ADR settings from its original setpoints settings. Off: Allows shed load demand request from utility company (setpoint will change according to shed offset) On: Rejects or cancels shed load demand request from utility company (setpoints remain the same). Display Readings: 1=Off, 2=On

Wireless Menu

The Wireless screen shows only in modules with onboard Zigbee or options Zigbee add-on module.

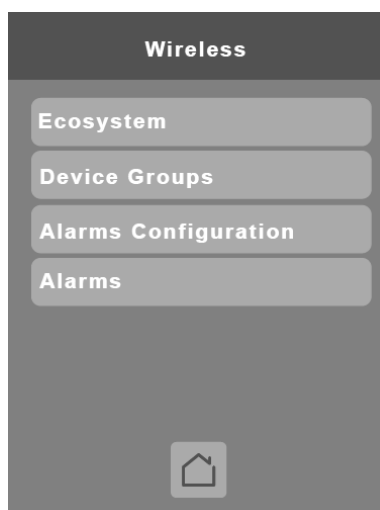

Ecosystem Settings

The Ecosystem Settings screens show the network status, the number of paired devices as well as information for each paired device. A maximum of 20 Zigbee wireless devices can be paired to each Controller. Tap forward arrow to obtain information on each paired Zigbee device.



Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Network status Default value: Not det. Read Only MSI2	Zigbee Network Status Shows current status of Zigbee network. Pwr on: Zigbee module detected but not configured No NWK: Zigbee configured but no network joined Joined: Zigbee network joined Online: Communicating Display Readings: 1=Not det., 2=Pwr on, 3=No NWK, 4=Joined, 5=Online
Permit join Default value: Off	Permit Join Setting to 'On' allows the Controller to pair with a Zigbee device. Value must be set to 'On' to pair with initial device and then set to 'Off' if user wants to prevent additional Zigbee devices from joining the network. Changing this value to "Off" on the Coordinator prevents any new Zigbee devices from joining the network. Permit join can be On/Off when the Controller is a coordinator, however the parameter is read only when the Controller is a router. Permit join stays On for 3 hours. On: Allows Controller to pair with Zigbee wireless device Off: Prevents Controller from pairing with Zigbee wireless device, or prevent any additional Zigbee devices from joining network. Choices: On or Off


Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Permit timeout Default value: 0 Read Only	Permit Join Timeout Allows Zigbee devices to join the Coordinator Controller for 180 minutes from the moment it is set to ON. Once the timer elapses, no devices will be able to join the network. NOTE: Permit Join parameter must be set to 'On' to enable this feature. Range: 0 or 180 minutes
Paired devices Default value: 0 Read Only AI330	Paired Zigbee Devices Shows the number of Zigbee wireless devices currently paired with the Controller. A maximum of 20 Zigbee wireless devices can be paired with each Controller. Display Readings: 0 to 20 devices

Device 1-20

This screen is a subset of the Ecosystems screen and shows data for each paired Zigbee device. The Status, Temperature, Humidity, and CO₂ values will only be visible if they are supported by the device.

NOTE: Device X pages will only show up once devices have been paired.

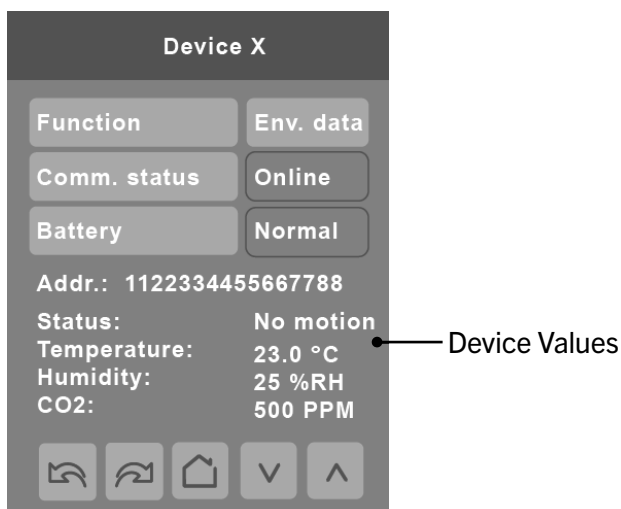

Parameter Details


Configuration Parameters Default Value	Significance and Adjustments
Function Default value: None MV210-400	Wireless Device X - Function Shows status of installed Zigbee wireless device. None: No status reported to Controller Window: Window sensor installed Door: Door sensor installed Motion: Device set to detect motion Env. data: Temperature, Humidity, CO2 sensor installed Remove: Removes device from Device list Water: Water Leak sensor installed Refrig.: Refrigerator temperature sensor installed Freezer: Freezer temperature sensor installed Choices: 1=None, 2=Window, 3=Door, 4=Motion, 5=Env. data, 6=Remove, 7=Water, 8=Refrig., 9=Freezer

Parameter Details (cont.)

Configuration Parameters Default Value	Significance and Adjustments
Comm. status Default value: Not paired Read Only MSI212-402	Wireless Device X - Communication Status Shows if device is communicating with Controller Not paired: Device not paired Online: Device paired and online Invalid: Device was paired and Controller detected a communication error (selected function does not match paired sensor functionality). Offline: Device paired but offline Display Readings: 1=Not paired, 2=Online, 3=Invalid, 4=Offline
Battery Default value: None Read Only MSI211-401	Wireless Device X - Battery Shows current status of battery in wireless device. Display Readings: 1=None, 2=Normal, 3=Low
Addr. Read Only CSV11-30	Wireless Device X - Address Shows unique IEEE (MAC) address of Zigbee wireless device
Status Default value: None Read Only Door status: BV1 Window status: BV3 Water status: BV46 Sensor type: MSI180-199 Status: MSI210-400	Wireless Device X - Sensor Type Wireless Device X - Status Shows the ZigBee wireless device status. Device status and values will be different depending on the type of device: <ul style="list-style-type: none"> • Door Contact Status: 1=Closed, 2=Opened • Window Contact Status: 1=Closed, 2=Opened • Motion Sensor: No Motion, Motion • Water Leak Sensor Status: 1=Normal, 2=Leak Display Readings: Sensor Type: 1=None, 2=Unknown, 3=Motion, 4=Contact, 5=Water, 6=Temp., 7=Temp./RH, 8=CO2 Status: 1=None, 2=Closed, 3=Opened, 4=No motion, 5=Motion, 6=Normal, 7=Leak
Temperature Read Only AI315-324, 355-364	Wireless Device X - Temperature Range: -40 to 185 °F (-40 to 85 °C)
Humidity Read Only AI365-384	Wireless Device X - Humidity Percent relative humidity Range: 0 to 100 %
CO2 Read Only AI385-404	Wireless Device X - CO₂ Parts per million Range: 0 to 5000 PPM

Temperature Alarms Configuration

The Temperature Alarms Configuration screens show the values that trigger an alarm only for Zigbee wireless sensors with temperature measurement.

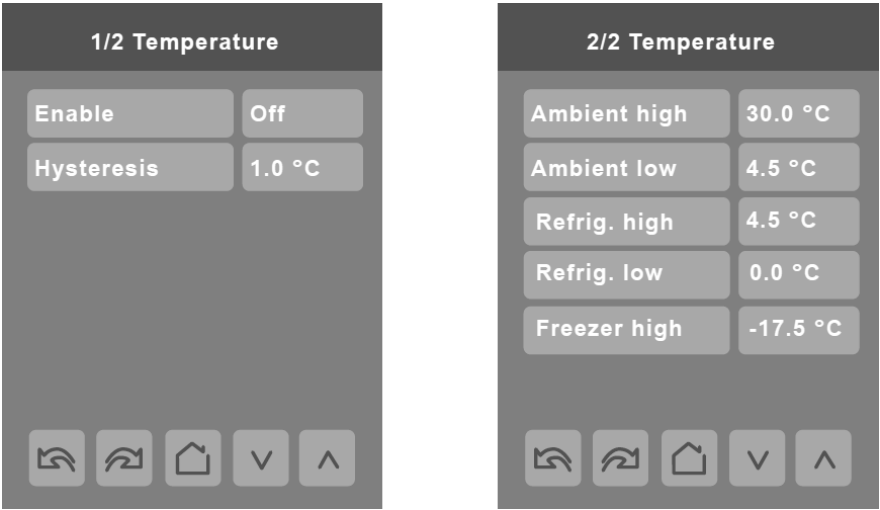


Parameter Details

Configuration Parameters	Default Value	Significance and Adjustments
Enable Default value: Off MV151		Temperature Alarm Enabled Enables wireless device to alert Controller if temperature value reaches defined value in a particular paired device. Choices: 1=Off, 2=On
Hysteresis Default value: 2.0 °F (1.0 °C) AV210		Temperature Alarm Hysteresis Choices: 0 to 10°F (0 to 5.5 °C)

Alarms

The Alarms screen shows data for paired Zigbee wireless devices.

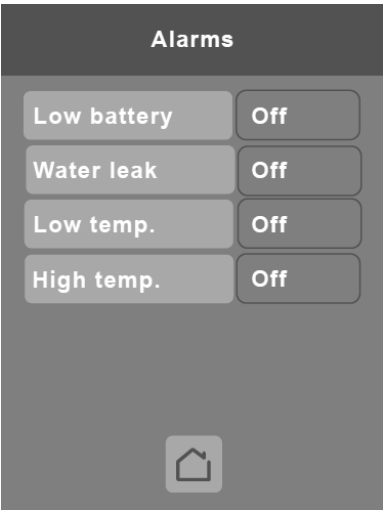


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Low battery Default value: Off Read Only BV5	Low Battery Alarm Shows if any wireless paired device has a low battery status (On) or no paired device has low battery (Off). Display Readings: 1=Off, 2=On
Low temp. Default value: Off Read Only BV47	Low Temperature Shows if any temperature sensor paired device has detected a low temperature (On) or no low temperature detected in any of the temperature sensor paired devices (Off). Display Readings: 1=Off, 2=On
High temp. Default value: Off Read Only BV53	High Temperature Shows if any temperature sensor paired device has detected a high temperature (On) or no high temperature detected in any of the temperature sensor paired devices (Off). Display Readings: 1=Off, 2=On

Lua Screens

The Lua settings screens show information about any custom Lua script uploaded to the Controller. Lua scripts are not programmable on the Controllers. Lua scripts can be uploaded to the Controller via the Uploader Tool or via BACnet.

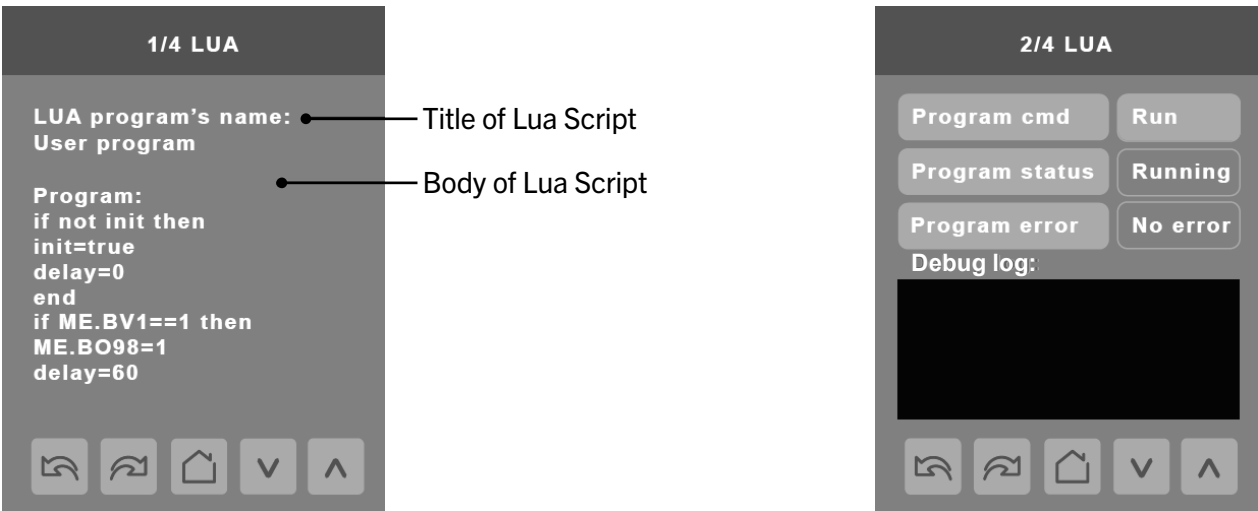


Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Program cmd Default value: Run	Program Command Run: Lua script activated and runs continuously until deactivated Stop: Lua script deactivated Choices: Stop or Run
Program status Default value: Idle Read Only	Program Status Running: Lua script active Halted: Lua script stopped and not active Idle: Lua script is running but not currently performing any actions Waiting: Lua script running and waiting for a response Uploading: Lua script currently unloading from Controller Loading: Lua script currently loading to Controller Display Readings: Idle, Loading, Running, Waiting, Halted, Unloading
Program error Default value: No error Read Only	Program Error No error: No errors in Lua script Syntax: Syntax error in Lua script detected Runtime: Runtime error occurred while running Lua script Memory: Device has run out of memory for the script Display Readings: No error, Syntax, Runtime, Memory

Lua Generic Parameters

The Lua settings include twelve generic parameters that do not have a specific function or pre-configured functions. These parameters can be used in custom Lua scripts to store a value. They are also user configurable in their default state, but when assigned a value via a Lua script or via BACnet (Priority 1-16), they become read only (not configurable locally by the user) and the display color of the parameter changes to red. These parameters can also be configured via Zigbee, however they can still be modified locally by the user.

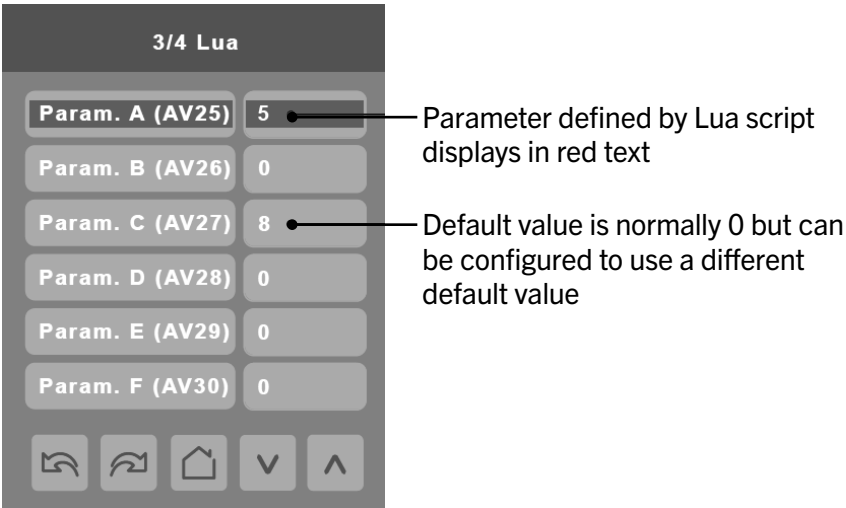

Parameter Details

Configuration Parameters Default Value	Significance and Adjustments
Parameter A (AV25) Default value: 0 AV25	Lua Parameter A (AV25) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter B (AV26) Default value: 0 AV26	Lua Parameter B (AV26) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter C (AV27) Default value: 0 AV27	Lua Parameter C (AV27) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter D (AV28) Default value: 0 AV28	Lua Parameter D (AV28) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter E (AV29) Default value: 0 AV29	Lua Parameter E (AV29) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter F (AV30) Default value: 0 AV30	Lua Parameter F (AV30) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter G (AV225) Default value: 0 AV225	Lua Parameter G (AV225) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter H (AV226) Default value: 0 AV226	Lua Parameter H (AV226) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter I (AV227) Default value: 0 AV227	Lua Parameter I (AV227) The value of this parameter depends on what is assigned to it from a BAS or Lua script.
Parameter J (AV228) Default value: 0 AV228	Lua Parameter J (AV228) The value of this parameter depends on what is assigned to it from a BAS or Lua script.


Parameter Details (cont.)

Configuration Parameters Default Value		Significance and Adjustments	
Parameter K (AV229) Default value: 0 AV229		Lua Parameter K (AV229) The value of this parameter depends on what is assigned to it from a BAS or Lua script.	
Parameter L (AV230) Default value: 0 AV230		Lua Parameter L (AV230) The value of this parameter depends on what is assigned to it from a BAS or Lua script.	

4.0 Appendix

MP3 Series Field Wiring


Single Heater, Single Thermostat Connection

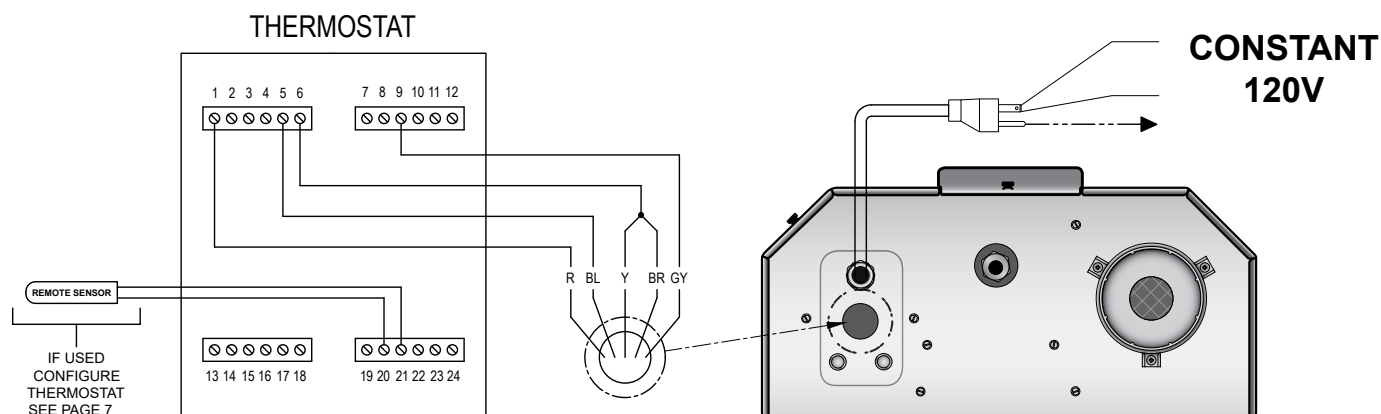


Controlling Multiple Heaters with a Single Control Device

When multiple heaters are operated by the same control device (for example, common vented heaters), an external relay kit (P/N: ERK) must be utilized (one per heater). This allows the heater's 24 V supply voltage to be isolated from the external control voltage of the thermostats. The ERK is to be installed on or near the heater. Follow the instructions that accompany the accessory for more information and wiring diagrams

Multiple Heaters, Single Thermostat Connection with External Relay Kit Using 1 Bank

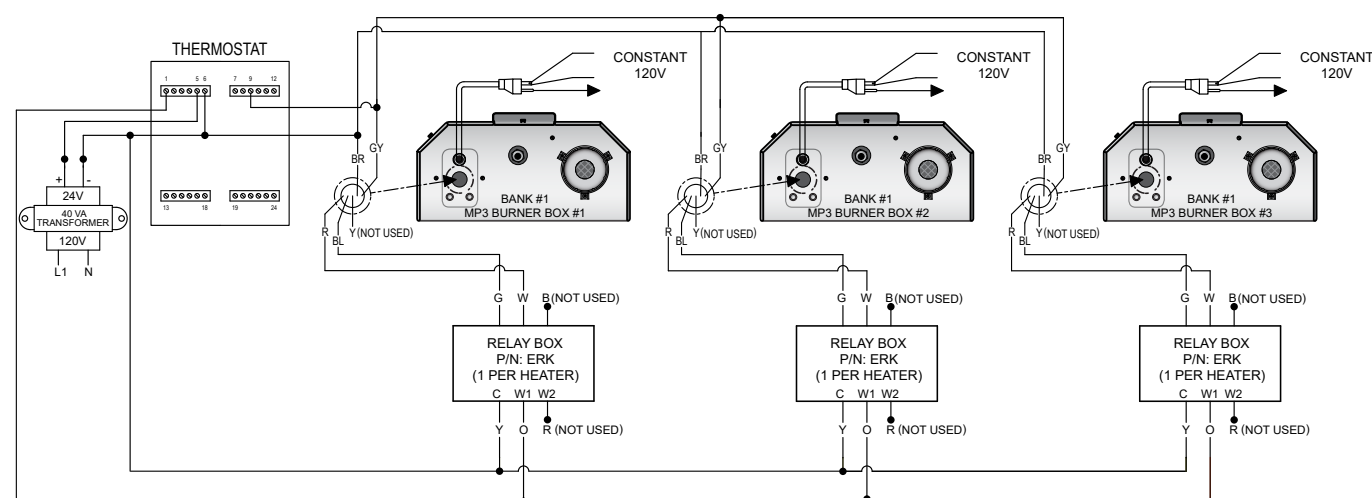

Multiple Heaters, Single Thermostat Connection with External Relay Kit Using All 4 Banks

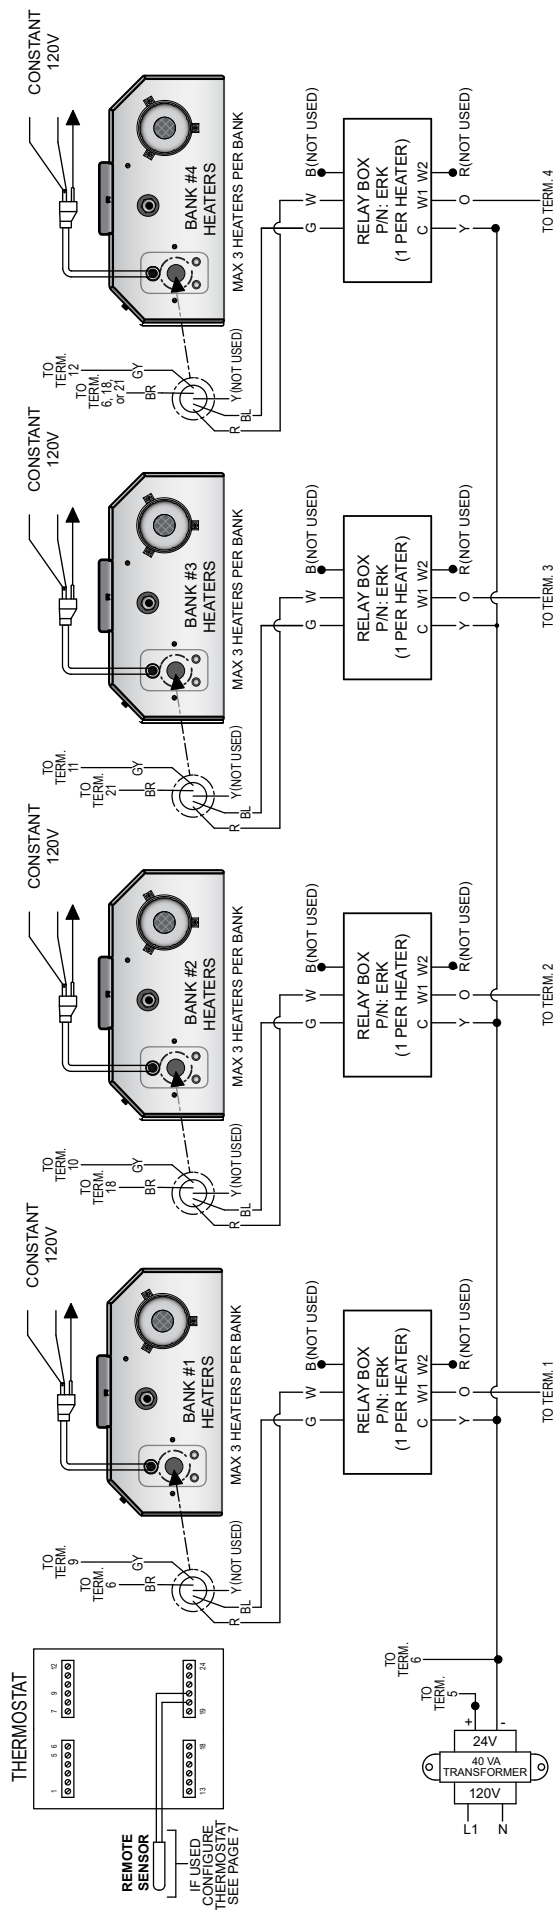

Notes

[illegible]

© 2024 Detroit Radiant Products Co.
21400 Hoover Road • Warren, MI 48089
Phone: (586) 756-0950 Fax: (586) 756-2626
www.detroitradiant.com • sales@drp-co.com